

Spectre/KORE Wireless Development Kit



PRODUCT FEATURES

- **RT3G-300KOR 3G Cellular Router**
1 Ethernet Port, 1 I/O Port, USB
- **RT3G-320KOR-W 3G Cellular Router**
802.11 b/g/n Wi-Fi, 1 Ethernet Port, 1 I/O Port, USB, 1 RS-232 Serial Port
- **RT3G-340KOR-W 3G Cellular Router**
802.11 b/g/n Wi-Fi, 1 Ethernet Port, 1 I/O Port, USB, 1 RS-422/485 Serial Port

1 Trial Plan

To activate your Spectre/KORE Wireless Development Promotional Data Plan, contact Matt Davis at Kore Telematics

Matt Davis

Telephone: (678) 389-3146 ext 1373

Email: MDavis@koretelematics.com

2 Full Activation

At the end of the 90-day data plan trial period, contact KORE Telematics to subscribe to an M2M data solution on their nationwide GSM and CDMA networks.



KORE DATA WIRELESS PLAN

- 1 GB or 5 GB Promotional Data Plans available
- Valid for 90 days from activation
- No long-term commitment
- Select either AT&T or Verizon 3G networks

ABOUT KORE TELEMATICS

KORE is the largest M2M service provider of global machine-to-machine (M2M) network connectivity, offering complete global coverage through GSM, CDMA and satellite data services.


As a premier M2M service provider, KORE offers connectivity where you need it, with the right M2M network technology for your business.

KORE M2M Network Services Provide:

- Speed to market – activate and test your M2M solution in hours, not days
- Access to commercial grade GSM/CDMA networks with comprehensive coverage throughout North America
- Access to the KORE comprehensive business management platform, PRiSMPro for activation, provisioning, data management and reporting




Product Overview

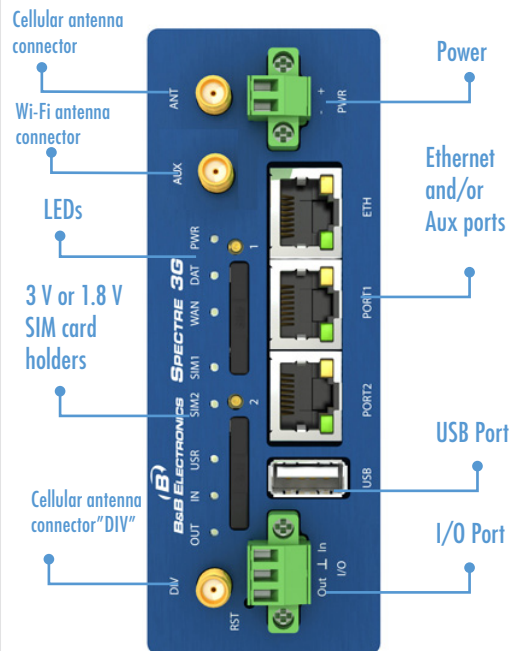

2

Insert SIM card


You may open the SIM card holder by pressing the small button to the right of the holder. Use the enclosed SIM card for AT&T networks. For Verizon networks no SIM card is needed.

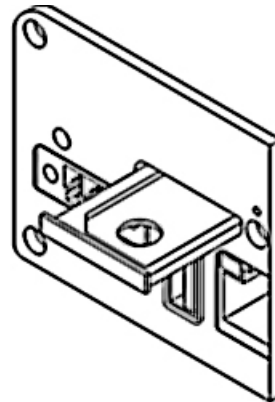

The router will not work unless the antennas are attached, power is supplied, and activated SIM cards are inserted.

1


Attach Antenna

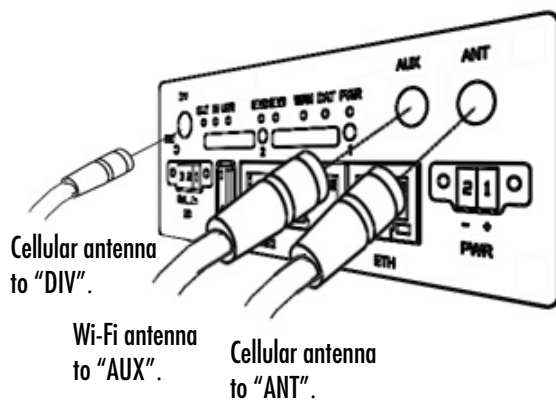

3

Attach Ethernet cable

You will use an Ethernet connection to configure the router and to communicate with it.

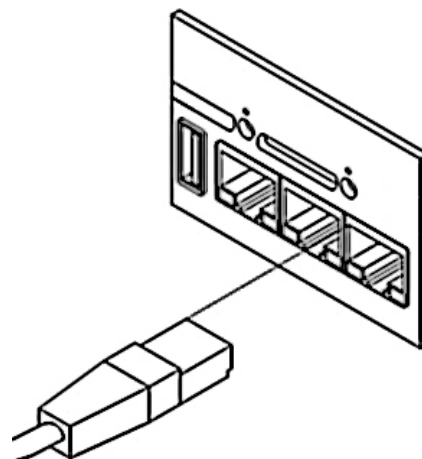

6

Provision the Router on the KORE network

Under CONFIGURATION click MOBILE WAN.

Change carrier dropdown to "AT&T" or "Verizon".

Enter the APN number provided by KORE.

Click Apply.


4

Attach Power

Apply +10 to +30 V DC. The router has built-in protection against reverse polarity.



Powering the router with no antenna attached can damage the router

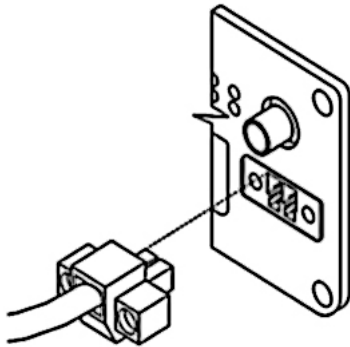

5

Configure the Router

You may configure the router via a web browser or Telnet.

The default router IP address is: 192.168.1.1

Default Username = root

Default Password = root

Detailed configuration data is included on your installation CD and also on our web site.

B&B Electronics Technical Support for Spectre Router

Telephone: 1-800-346-3119

Monday through Friday

7:00 a.m 7:00 p.m. CST

Internet: <http://www.bb-elec.com/Tech-Support/Request-Technical-Support.aspx>