

# Delphi Series Q48SD Quarter Brick Family Full Digital Control DC/DC Power Modules: 48V In, 12V/34A Out

The Delphi Series Q48SD, 36~75V input, isolated single output, Quarter Brick, are full digital control DC/DC converters, and are the latest offering from a world leader in power systems technology and manufacturing — Delta Electronics, Inc. The Q48SD series provide up to 400 watts of power in an industry standard, DOSA compliant footprint and pin out; the typical efficiency is 96% at 48V input, 12V output and 34A load. There is a built-in digital PWM controller in the Q48SD series, which is used to complete the Vo feedback, PWM signal generation, droop current sharing, fault protection, and PWBUS communications, and so on. With the digital control, many design and application flexibility, advanced performance, and reliability are obtained; and the Q48SD series can be connected in parallel directly for higher power without add external oring-fet.

#### **FEATURES**

- High efficiency: 96% @12V/34A
- Size:

Without Heat spreader:

58.4 x 36.8 x 11.2mm (2.30"x1.45"x0.44") With heat spreader:

58.4 x 36.8 x 12.7mm (2.30"x1.45"x0.50")

- PMBus Rev.1.2 compliance
- Industry standard, DOSA compliant pin out
- Can be connected in parallel directly
- Parallel and Droop current sharing
- Fixed frequency operation
- Input UVLO, Output OCP & OVP, OTP
- Monotonic startup into normal and Pre-biased loads
- 2250V Isolation and basic insulation
- No minimum load required
- ISO 9001, TL 9000, ISO 14001, QS 9000,
   OHSAS 18001 certified manufacturing facility
- UL/cUL 60950-1 (US & Canada) to be recognized

### **OPTIONS**

- Digital PMBus interface
- Parallel and Droop Current sharing
- Trim
- Positive On/Off logic
- With heatspreader
- Short pin lengths available

#### **APPLICATIONS**

- Telecom / DataCom
- Wireless Networks
- Optical Network Equipment
- Server and Data Storage
- Industrial/Test Equipment



### **TECHNICAL SPECIFICATIONS**

( $T_A$ =25°C, airflow rate=300 LFM,  $V_{in}$ =48Vdc, nominal Vout unless otherwise noted.)

PARAMETER	NOTES and CONDITIONS	Q48SD12034 (Standard)				
		Min.	Тур.	Max.	Units	
ABSOLUTE MAXIMUM RATINGS						
Input Voltage				00	Vdc	
Continuous Transient (100ms)	100ms			80 100	Vdc	
On/off Pin Voltage	Tooms	-50		50	Vuc	
	Trim/Current Sharing, C2, Data, SMBAlert, Clock, Addr1,					
Other Pin Voltage	Addr0	-0.3		3.6	V	
Operating Ambient Temperature		-40		85	°C	
Storage Temperature		-55		125	°C	
Input/Output Isolation Voltage INPUT CHARACTERISTICS				2250	Vdc	
Operating Input Voltage		36		75	Vdc	
Input Under-Voltage Lockout				. 0		
Turn-On Voltage Threshold		32.5	34	35.5	Vdc	
Turn-Off Voltage Threshold		30.5	32	33.5	Vdc	
Maximum Input Current	Vin=36V, 100% Load,		11.33	11.5	Α	
No-Load Input Current Off Converter Input Current			75 18	110 23	mA mA	
Inrush Current(I <sup>2</sup> t)	With 100uF external input capacitor		10	1	A <sup>2</sup> s	
Input Terminal Ripple Current	RMS, With 100uF input cap.		0.32	0.48	A	
Input Reflected-Ripple Current	P-P thru 12µH inductor, 5Hz to 20MHz		20	,,,,,	mA	
Input Voltage Ripple Rejection	120 Hz		50		dB	
OUTPUT CHARACTERISTICS						
The module without droop current sharing option code	No. of the last of		- 10	10.05		
Output Voltage Set Point	Vin=48V, Io=Io.max, Tc=25°C	11.95	12	12.05	Vdc	
Output Voltage Regulation Over Load	lo=lo.min to lo.max		20	50	ma\/	
Over Line	Vin=38.5V to 75V		20	50	mV mV	
Over Temperature	Tc=-40°C to 125°C		±120	30	mV	
Total Output Voltage Range	over sample load, and temperature, from 38.5~75V Vin	11.75	12	12.25	V	
Total Corput Condigo Condigo	over sample load, and temperature, from 36~75V Vin	11.2	12	12.25	V	
The module with droop current sharing option code						
Output Voltage Set Point	Vin=48V, Io=0A, Tc=25°C	12.4	12.45	12.5	Vdc	
Output Voltage Regulation						
Over Load Over Line	lo=lo,min to lo,max Vin=40V to 75V		500 20	600 50	mV mV	
Over Temperature	Tc=-40°C to 125°C		±120	50	mV	
Total Output Voltage Range	over sample load, and temperature, from 40~75V Vin	11.7	12.45	12.65	V	
Total Output Total Services	over sample load, and temperature, from 36~75V Vin	11.2	12.45	12.65	V	
Both With and without droop current sharing option code						
Output Voltage Ripple and Noise	5Hz to 20MHz bandwidth					
Peak-to-Peak	Full Load, 1µF ceramic, 10µF tantalum		100	200	mV	
RMS Operating Output Current Pange	Full Load, 1µF ceramic, 10µF tantalum	0	40	80 34	mV A	
Operating Output Current Range Output DC Current-Limit Inception	Full input voltage range			_	%	
Output DC Current-Limit Inception	Output Voltage 10% Low	110		150	%	
Output Voltage Trim Range	Vin=48V, Pout max rated power;	-20		10	%	
DYNAMIC CHARACTERISTICS	For droop parallel module, such function is disabled.					
Output Voltage Current Transient	48V, 10μF Tan & 1μF Ceramic load cap, 0.1A/μs					
Output voltage overshoot and undershoot	0.1A/µs, 50% to 75% lo.max, 10µF Tan load cap		200	400	mV	
Setting Time (within 1% Vout nominal)				300	μs	
Output voltage overshoot and undershoot	2.5A/μs, 25% to 75% lo.max, 4000μF Tan load cap		300	450	mV	
Setting Time (within 1% Vout nominal)				1000	μs	
Turn-On Transient Start-Up Time, From On/Off Control			40	50	mo	
Start-Up Time, From On/Off Control Start-Up Time, From Input			40 50	60	ms ms	
Output Capacitance		220	00	16000	μF	
EFFICIENCY						
100% Load	Vin=48V	94.7	95.5		%	
60% Load	Vin=48V	95.2	96.0		%	
ISOLATION CHARACTERISTICS				0070		
Input to Output		10		2250	Vdc	
Isolation Resistance Isolation Capacitance		10	1500		MΩ pF	
FEATURE CHARACTERISTICS			1000		рі	
Current sharing accuracy				10	%	
Switching Frequency			130		kHz	
ON/OFF Control						
Logic Low	Von/off	-0.7		0.8	V	
Logic High	Von/off	2.4		50	V	
ON/OFF Current (for both remote on/off logic)	Ion/off at Von/off=0.0V	40.		0.5	mA ^	
ON/OFF Current (for both remote on/off logic)  Leakage Current (for both remote on/off logic)	Ion/off at Von/off=2.4V Logic High, Von/off=15V	10		50	μ <b>A</b> μA	
Output Voltage Trim Range	Vin=48V, Pout max rated power	-20		10	μA %	
Output Voltage Protection	Over full temp range; % of nominal Vout	14		17	V	
Calpat Offi Foliago i foliotion	Over fail temp range, 70 of florilliar vouc	17	1		•	

### **TECHNICAL SPECIFICATIONS**


(T<sub>A</sub>=25°C, airflow rate=300 LFM, V<sub>in</sub>=48Vdc, nominal Vout unless otherwise noted.)


PARAMETER	NOTES and CONDITIONS	Q48SD12034 (Standard)				
		Min.	Тур.	Max.	Units	
PMBus Signal Interface Characteristics						
Logic Input Low (V⊩)	C2, Data, SMBAlert, Clock pin	0		0.8	V	
Logic Input High (V⊮)	C2, Data, SMBAlert, Clock pin	2.1		3.3	V	
Logic Onput Low (Vol)	C2, Data, SMBAlert, Clock pin; IoL=6mA			0.4	V	
Logic Onput High (Voн)	C2, Data, SMBAlert, Clock pin; loн=-6mA	2.6			V	
PMBus Operating Frequency Range		100		400	KHz	
PMBus Monitoring CHARACTERISTICS						
Output Current Reading Accuracy	lo=50% ~ 100% of lo, max;	-5		+5	%	
	lo=5% ~ 50% of lo, max;	-2		+2	Α	
Output Voltage Reading Accuracy		-2		+2	%	
Input Voltage Reading Accuracy		-4		+4	%	
Temperature Reading Accuracy		-5		+5		
GENERAL SPECIFICATIONS						
MTBF	lo=100% of lo, max; 300LFM; Ta=25°C		1		M hours	
Weight	Without heat spreader		52.5		grams	
Weight	With heat spreader		66.5		grams	
Over-Temperature Shutdown (Without heat spreader)	Refer to Figure 22 for Hot spot 1 location (48Vin,80% lo, 200LFM,Airflow from Vin+ to Vin-)		128		°C	
Over-Temperature Shutdown (With heat spreader)	Refer to Figure 24 for Hot spot 2 location (48Vin,80% lo, 200LFM,Airflow from Vin+ to Vin-)		120		°C	
Over-Temperature Shutdown (NTC resistor)	Refer to Figure 22 for NTC resistor location		125		°C	
Note: Please attach thermocouple on NTC resistor to test OT	P function, the hot spots' temperature is just for reference.					

### **PIN DEFINATION**

Pin#	Name	Function	Pin#	Name	Function
1	VIN(+)		7	C2	Secondary on/off control pin; The default configuration is set to ignore this input. And such pin can be reconfigured by the PMBus Interface.
2	ON/OFF	Primary on/off control pin	8	Sig_Gnd	Signal ground
3	VIN(-)		9	Data	PMBus data line
4	VOUT(-)		10	SMBAlert	PMBus SMBAlert line
5	Trim	Trim pin	11	Clock	PMBus clock line
6	VOUT(+)		12	Addr1	ADDR1 pin sets the high order digit of the address.
			13	Addr0	ADDR0 pin sets the low order digit of the address.

### SIMPLIFIED APPLICATION CIRCUIT

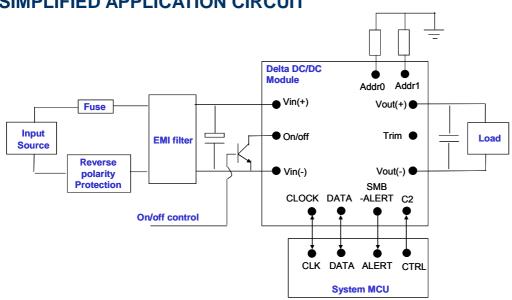


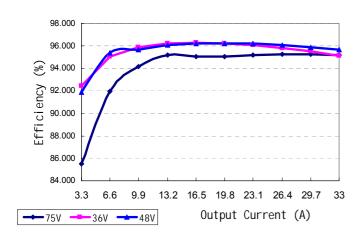

25 20 Power Loss (W) 15 10 5 3.3 6.6 9.9 13.2 16.5 19.8 23.1 26.4 33 **-**75V 36V **-**48V Output Current (A)

**Figure 1:** Efficiency vs. load current for minimum, nominal, and maximum input voltage at 25°C

**Figure 2:** Power dissipation vs. load current for minimum, nominal, and maximum input voltage at 25°C

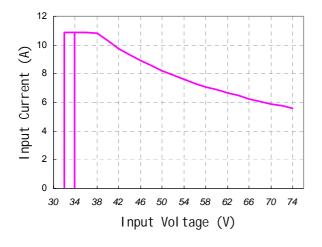

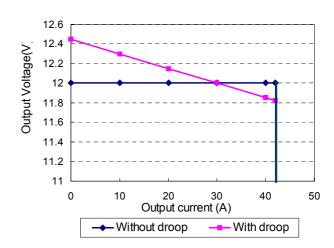


Figure 3: Typical full load input characteristics at room temperature

**Figure 4:** Output voltage regulation vs load current showing typical current limit curves and converter shutdown points for nominal input voltage at room temperature

### For Negative Remote On/Off Logic

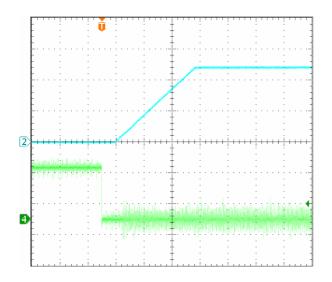
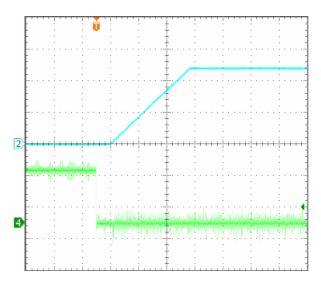


Figure 5: Turn-on transient at zero load current (10ms/div). Vin=48V. Top Trace: Vout, 5V/div; Bottom Trace: ON/OFF input, 2V/div



**Figure 6:** Turn-on transient at full rated load current (constant current load) (10 ms/div). Vin=48V. Top Trace: Vout, 5V/div; Bottom Trace: ON/OFF input, 2V/div

### For Input Voltage Start up

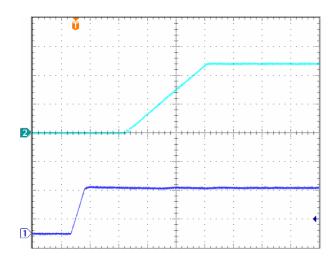


Figure 7: Turn-on transient at zero load current (10 ms/div). Vin=48V. Top Trace: Vout, 5V/div, Bottom Trace: input voltage, 30V/div

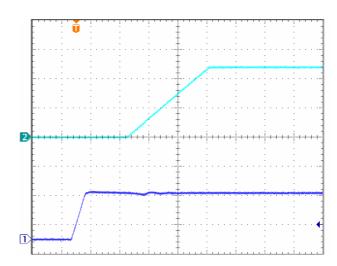


Figure 8: Turn-on transient at full rated load current (constant current load) (10 ms/div). Vin=48V. Top Trace: Vout, 5V/div; Bottom Trace: input voltage, 30V/div

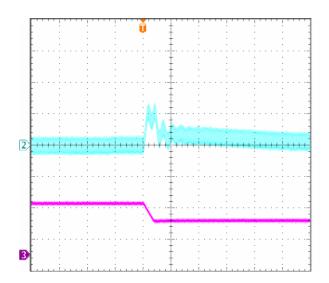


Figure 9: Output voltage response to step-change in load current (75%-50% of lo, max; di/dt = 0.1A/μs, Vin=48V). Load cap: 10μF, tantalum capacitor and 1μF ceramic capacitor. Top Trace: Vout (200mV/div, 200us/div); Bottom Trace: lo (15A/div, 200us/div). Scope measurement should be made using a BNC cable (length shorter than 20 inches). Position the load between 51 mm to 76 mm (2 inches to 3 inches) from the module..

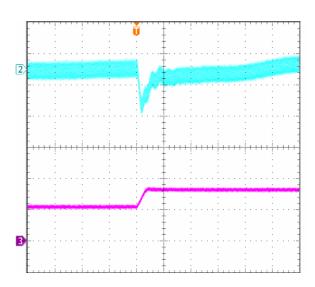


Figure 10: Output voltage response to step-change in load current (50%-75% of Io, max; di/dt = 0.1A/μs, Vin=48V). Load cap: 10μF, tantalum capacitor and 1μF ceramic capacitor. Top Trace: Vout (200mV/div, 200us/div); Bottom Trace: Io (15A/div, 200us/div). Scope measurement should be made using a BNC cable (length shorter than 20 inches). Position the load between 51 mm to 76 mm (2 inches to 3 inches) from the module..



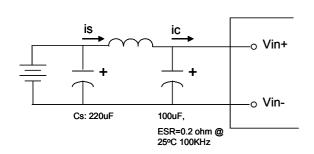


Figure 11: Test set-up diagram showing measurement points for Input Terminal Ripple Current and Input Reflected Ripple Current.

Note: Measured input reflected-ripple current with a simulated source Inductance ( $L_{TEST}$ ) of 12  $\mu$ H. Capacitor Cs offset possible battery impedance. Measure current as shown below



**Figure 12:** Input Terminal Ripple Current, i<sub>c</sub>, at full rated output current and nominal input voltage with 12µH source impedance and 100µF electrolytic capacitor (100 mA/div, 2us/div).

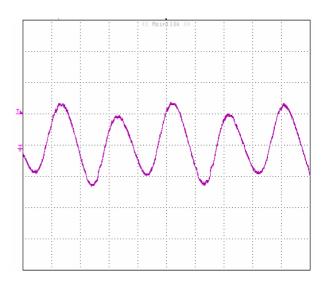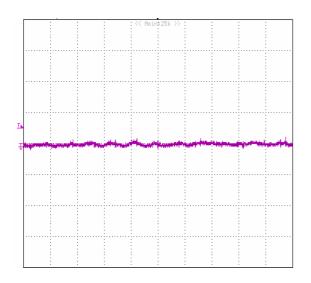

Copper Strip

Vo(+)

10u

T

1u

SCOPE

RESISTIVE
LOAD

**Figure 13:** Input reflected ripple current, i<sub>s</sub>, through a 12μH source inductor at nominal input voltage and rated load current (20 mA/div, 5us/div).

Figure 14: Output voltage noise and ripple measurement test setup

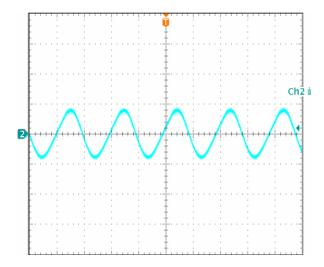


Figure 15: Output voltage ripple at nominal input voltage and rated load current (50 mV/div, 2us/div)

Load capacitance:  $1\mu F$  ceramic capacitor and  $10\mu F$  tantalum capacitor. Bandwidth: 20 MHz. Scope measurements should be made using a BNC cable (length shorter than 20 inches). Position the load between 51 mm to 76 mm (2 inches to 3 inches) from the module.

### **DESIGN CONSIDERATIONS**


### **Input Source Impedance**

The impedance of the input source connecting to the DC/DC power modules will interact with the modules and affect the stability. A low ac-impedance input source is recommended. If the source inductance is more than a few  $\mu H$ , we advise adding a 100 to 200  $\mu F$  electrolytic capacitor (ESR < 0.7  $\Omega$  at 100 kHz) mounted close to the input of the module to improve the stability.

### Layout and EMC Considerations

Delta's DC/DC power modules are designed to operate in a wide variety of systems and applications. For design assistance with EMC compliance and related PWB layout issues, please contact Delta's technical support team. An external input filter module is available for easier EMC compliance design. Below is the reference design for an input filter tested with Q48SD120XXXXXX to meet class B in CISSPR 22.

#### **Schematic and Components List**

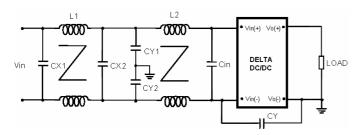


### For Single Module Application

Cin is 100uF low ESR Aluminum cap; CX1 is 2.2uF ceramic cap × 2pcs in parallel; CX2 is 2.2uF ceramic cap; CY1 and CY2 are 47nF ceramic cap;

CY is 3.3nF ceramic cap;

L1 and L2 are common-mode inductors, L1=L2=0.47mH;

### Test Result: Vin=48V, Io=34A

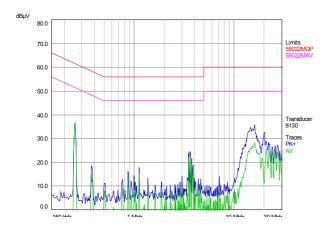

### For parallel application

Cin is 100uF low ESR Aluminum cap x 2pcs in parallel;

CX1 is 2.2uF ceramic cap × 2pcs in parallel;

CX2 is 2.2uF ceramic cap;

CY1 is 47nF ceramic cap x 2pcs in parallel;


CY2 is 47nF ceramic cap x 2pcs in parallel;

CY is 3.3nF ceramic cap;

L1 is Pulse P0469NL (0.63mH/11.6A) x 2pcs in parallel;

L2 is Pulse P0469NL (0.63mH/11.6A) x 2pcs in parallel;

#### Test Result: Vin=48V, Io=68A

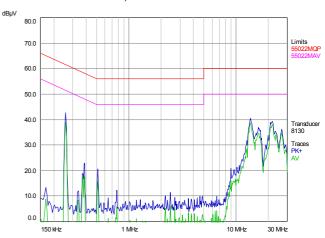

The blue line is quasi peak mode and the green one is average mode.

### **Safety Considerations**

The power module must be installed in compliance with the spacing and separation requirements of the end-user's safety agency standard, i.e., UL60950-1, CSA C22.2 NO. 60950-1 2nd, IEC 60950-1 2nd : 2005, EN 60950-1 2nd: 2006+A11+A1: 2010, if the system in which the power module is to be used must meet safety agency requirements.

Basic insulation based on 75 Vdc input is provided between the input and output of the module for the purpose of applying insulation requirements when the input to this DC-to-DC converter is identified as TNV-2 or SELV. An additional evaluation is needed if the source is other than TNV-2 or SELV.

When the input source is SELV circuit, the power module meets SELV (safety extra-low voltage) requirements. If the input source is a hazardous voltage which is greater than 60 Vdc and less than or equal to 75 Vdc, for the module's output to meet SELV requirements, all of the following must be met:

- The input source must be insulated from the ac mains by reinforced or double insulation.
- The input terminals of the module are not operator accessible.
- A SELV reliability test is conducted on the system where the module is used, in combination with the module, to ensure that under a single fault, hazardous voltage does not appear at the module's output.

When installed into a Class II equipment (without grounding), spacing consideration should be given to the end-use installation, as the spacing between the module and mounting surface have not been evaluated.

The power module has extra-low voltage (ELV) outputs when all inputs are ELV.

This power module is not internally fused. To achieve optimum safety and system protection, an input line fuse is highly recommended. The safety agencies require a Fast-acting fuse with 30A maximum rating to be installed in the ungrounded lead. A lower rated fuse can be used based on the maximum inrush transient energy and maximum input current.

### **Soldering and Cleaning Considerations**

Post solder cleaning is usually the final board assembly process before the board or system undergoes electrical testing. Inadequate cleaning and/or drying may lower the reliability of a power module and severely affect the finished circuit board assembly test. Adequate cleaning and/or drying is especially important for un-encapsulated and/or open frame type power modules. For assistance on appropriate soldering and cleaning procedures, please contact Delta's technical support team.

### **FEATURES DESCRIPTIONS**

#### **Over-Current Protection**

The modules include an internal output over-current protection circuit. If the output current exceeds the OCP set point, the modules will shut down, and enter hiccup mode or latch mode. For hiccup mode, the module will try to restart after shutdown. If the overload condition still exists, the module will shut down again. This restart trial will continue until the overload condition is corrected. For latch mode, the module will shut down and not attempt to restart. The latch is reset by either cycling the input power or by toggling the primary on/off signal for one second. The OCP threshold and protection mode can be reconfigured by the PMBus Interface; the default configuration is hiccup mode.

### **Over-Voltage Protection**

The modules include an internal output over-voltage protection circuit. If output voltage exceeds the over-voltage set point, the module will shut down, and enter in hiccup mode or latch mode. For hiccup mode, the module will try to restart after shutdown. If the output overvoltage condition still exists, the module will shut down again. This restart trial will continue until the over-voltage condition is corrected. For latch mode, the module will shut down and not attempt to restart. The latch is reset by either cycling the input power or by toggling the primary on/off signal for one second. The Vo OVP threshold and protection mode can be reconfigured by the PMBus Interface; The default configuration is hiccup mode.

### **Over-Temperature Protection**

The modules include an internal over-temperature protection circuit. If the module temperature exceeds the over-temperature threshold the module will shut down, and enter in auto-recovery mode or latch mode. For auto-recovery mode, the module will monitor the module temperature after shutdown. Once the temperature is dropped and within the specification, the module will be auto-recovery. For latch mode, the module will shut down and not attempt to restart. The latch is reset by either cycling the input power or by toggling the primary on/off signal for one second. The OTP threshold and protection mode can be reconfigured by the PMBus Interface; The default configuration is hiccup mode.

### **Primary Remote On/Off**

The primary remote on/off feature on the module can be either negative or positive logic. Negative logic turns the module on during a logic low and off during a logic high. Positive logic turns the modules on during a logic high and off during a logic low.

The primary remote on/off can be controlled by an external switch between the on/off terminal and the Vi(-) terminal. The switch can be an open collector or open drain. If the remote on/off feature is not used, for negative logic, please short the on/off pin to Vi(-); For positive logic, please leave the on/off pin floating. The module will not response to the remote on/off signal which is less than 120us. The primary remote on/off logic can be reconfigured by the PMBus Interface.

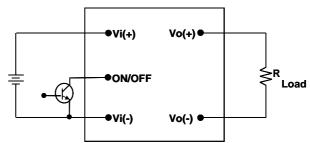


Figure 17: Remote on/off implementation

### Secondary Remote On/Off

Reference to the Vo(-) terminal, there is a C2 pin. The default configuration is set to ignore this input. And such pin can be reconfigured as secondary remote on/off pin by the PMBus interface including either negative or positive logic. Negative logic turns the module on during a logic low and off during a logic high. Positive logic turns the modules on during a logic high and off during a logic low. The secondary remote on/off can be controlled by an external switch between the on/off terminal and the Vo(-) terminal. The switch can be an open collector or open drain.

### **Parallel and Droop Current Sharing**

The modules are capable of operating in parallel, and realizing current sharing by droop current sharing method. There is about 500mV output voltage droop from 0A to full output Load, and there is no current sharing pin. By connectting the Vin pin and the Vo pin of the parallel module together, the current sharing can be realized automatically.

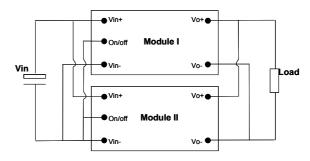


Figure 18: Parallel and droop current sharing configuration for no redundancy requirement system

If system has no redundancy requirement, the module can be parallel directly for higher power without adding external oring-fet; whereas, If the redundancy function is required, the external oring-fet should be added.

For a normal parallel operation the following precautions must be observed:

1. The current sharing accuracy equation is:

X% = | Io - ( Itotal / N ) | / Irated, Where,
Io is the output current of per module;
Itotal is the total load current;
N is parallel module numbers;

Irated is the rated full load current of per module.

- 2. To ensure a better steady current sharing accuracy, below design guideline should be followed:
- a) The inputs of the converters must be connected to the same voltage source; and the PCB trace resistance from Input voltage source to Vin+ and Vin- of each converter should be equalized as much as possible.
- b) The PCB trace resistance from each converter's output to the load should be equalized as much as possible.
- c) For accurate current sharing accuracy test, the module should be soldered in order to avoid the unbalance of the touch resistance between the modules to the test board.
- 3. To ensure the parallel module can start up monotonically without trigging the OCP circuit, below design guideline should be followed:
- a) Before all the parallel module finished start up, the total load current should be lower than the rated current of 1 module.
- b) The ON/OFF pin of the converters should be connected together to keep the parallel modules start up at the same time.
- c) The under voltage lockout point will slightly vary from unit to unit. The dv/dt of the rising edge of the input source voltage must be greater than 1V/ms to ensure that the parallel module start up at the same time.

### **PMBus Communication**

The module has a digital PMBus interface to allow the module to be monitored, controlled and configured by the system. The module supports 4 PMBus signal lines, Data, Clock, SMBALERT (optional), Control (C2 pin, optional), and 2 Address line Addr0 and Addr1. More detail PMBus information can be found in the PMB Power Management Protocol Specification, Part I and part II, revision 1.2; which is shown in <a href="http://pmbus.org">http://pmbus.org</a>. Both 100kHz and 400kHz bus speeds are supported by the module. Connection for the PMBus interface should be following the High Power DC specifications given in section 3.1.3 in the SMBus specification V2.0 or the Low Power DC specifications in section 3.1.2. The complete SMBus specification is shown in <a href="http://smbus.org">http://smbus.org</a>.

The module supports the Packet Error Checking (PEC) protocol. It can check the PEC byte provided by the PMBus master, and include a PEC byte in all message responses to the master. And the module also can communicate with the master that does not implement the PEC mechanism.

SMBALERT protocol is also supported by the module. SMBALERT line is also a wired-AND signal; by which the module can alert the PMBUS master via pulling the SMBALERT pin to an active low. There are two ways that the master and the module response to the alert of SMBALERT line.

One way is for the module used in a system that does not support Alert Response Address (ARA). The module is to retain it's resistor programmed address, when it is in active condition. ALERT The master communicate with the slave module using the programmed address, and using the various READ STATUS commands to find who cause for the SMBALERT. The CLEAR\_FAULTS command will clear the SMBALERT.

The other way is for the module used in a system that does support Alert Response Address (ARA). In this case, the master simultaneously accesses all SMBALERT devices through the ARA. Only the device which pulled SMBALERT low will acknowledge the ARA. The master is expected to perform the modified received byte operation to get the address of the alert slave, and retire the SMBALERT active signal. And then, the alter slave will return to it's resistor programmed address, allowing normal master-slave communications to proceed.


If more than one slave pulls SMBALERT line low, the lowest address slave will win communication rights via standard arbitration during the slave address transfer. After acknowledging the ARA, the lowest address slave must disengage its SMBALERT pull down. If the master still sees SMBALERT line low, it knows to send another ARA and ask again "Now, who is holding the alert down". The second slave is now locked-up and can't responsive. But the solution is easy; the master should now initiate a "dummy command", for example read command on the bus and read any parameter from any slave. After this, the second slave (the one that lost arbitration in the first run) will be released. Now, if master sends the second ARA, the second slave will provide its address to the Master.

The module contains a data flash used to store configuration settings, which will not be programmed into the device data flash automatically. The STORE\_DEFAULT\_ALL command must be used to commit the current settings are transfer from RAM to data flash as device defaults.

### **PMBUS Addressing**

The Module has flexible PMBUS addressing capability. When connect different resistor from Addr0 and Addr1 pin to GND pin, 64 possible addresses can be acquired. The address is in the form of octal digits; Each pin offer one octal digit, and then combine together to form the decimal address as shown in below.

Address = 8 \* ADDR1 + ADDR0

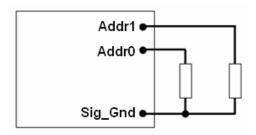


Corresponded to each octal digit, the requested resistor values are shown in below, and +/-5% resistors accuracy can be accepted. If there is any resistances exceeding the requested range, address 127 will be return. 0-12 and 40, 44, 45, and 55 in decimal address can't be used, since they are reserved according to the SMBus specifications, and which will also return address 127.

Octal digit	Resistor(Kohm)
0	10
1	15.4
2	23.7
3	36.5
4	54.9
5	84.5
6	130
7	200

### **PMBus Data Format**

 The module receives and report date in LINEAR format. The Exponent of the data words is fixed at a reasonable value for the command; altering the exponent is not supported. DIRECT format is not supported by the module.

For commands that set or report any voltage thresholds related to the output voltage, the module supports the linear data format consisting of a two byte value with a 16-bit, unsigned mantissa, and a fixed exponent of -12. The format of the two data bytes is shown below:




The equation can be written as:

Vout = Mantissa x 2<sup>-12</sup>

For example, considering set Vout to by VOUT\_COMMAND, the read/write data be calculated refer to below process:

- 1. Mantissa =Vout/2<sup>-12</sup>= 12/2<sup>-12</sup>=49152;
- Converter the calculated Mantissa to hexadecimal 0xC000.

 For commands that set or report all other thresholds, including input voltages, output current, temperature, time and frequency, the supported linear data format is a two byte value with: an 11 bit, two's complement mantissa, and a 5 bit, two's complement exponent (scaling factor). The format of the two data bytes is shown as in below.



The equation can be written as:

Value = Mantissa x 2<sup>exponer</sup>

For example, considering set the turn on threshold of input under voltage lockout to 34V by VIN\_ON command; the read/write data can be calculated refer to below process:

- Get the exponent of Vin, -3; whose binary is 11101 Mantissa =Vin/2<sup>-3</sup>=34/2<sup>-3</sup>=272;
- Converter the calculated Mantissa to hexadecimal 110, then converter to binary 00100010000;
- Combine the exponent and the mantissa, 11101 and 00100010000:
- 1110100100010000 Converter binary to hexadecimal E910.

The detail exponent and resolution of main parameter is summarized as below:

ialized as below.		
	Exponent	Resolution
Vin	-3	0.125V
Vo	-12	0.244mV
lo	-4	62.5mA
Temperature	-2	1
Switching requency	-2	0.25Khz
Time	-1	0.5ms

### **Supported PMBus Commands**

The main PMBus commands described in the PMBus 1.2 specification are supported by the module. Partial PMBus commands are fully supported; Partial PMBus commands have difference with the definition in PMBus 1.2 specification. All the supported PMBus commands are detail summarized in below table.

Command	Comman d Code	Command description	Transf -er type	Compatible with standard PMBUS or not?	Data Format	Default value	Range limit	Data units	Expon -ent	Note
OPERATION	0x01	Turn the module on or off by PMBUS command	R/W byte	Refer to below description;	Bit field	0x80	1	1	1	,
ON_OFF_CONFIG	0x02	Configures the combination of primary on/off pin and PMBUS command	R/W byte	Refer to below description;	Bit field	0x1D (Neg Logic); 0x1F (Pos Logic);	1	/	1	/
CLEAR_FAULTS	0x03	Clear any fault bits that have been set	Send byte	Yes	/	1	/	/	1	1
STORE_DEFAULT_ALL	0x11	Stores operating parameters from RAM to data flash	Send byte	Yes	1	1	1	1	1	This command is effective to the parameter of all command in the table.
RESTORE_DEFAULT_ALL	0x12	Restores operating parameters from data flash to RAM	Send byte	Yes	1	1	1	1	1	This command can't be issued when the power unit is running.
VOUT_MODE	0x20	To read Vo data format	Read byte	Yes	mode+	0x14	1	/	1	1
VOUT_COMMAND	0x21	Set the output voltage	R/W word	Yes	Vout Linear	12	9.6 ~13.2	Volts	-12	1
FREQUENCY_SWITCH	0x33	Set the switching frequency	R/W word	Yes	reque ncy Linear	130	120 ~140	KHz	-2	I
VIN_ON	0x35	Set the turn on voltage threshold of Vin under voltage lockout	R/W word	Yes	Vin Linear	34	32~46	V	-3	VIN_ON should be higher than VIN_OFF, and keep 2V hystersis.
VIN_OFF	0x36	Set the turn off voltage threshold of Vin under voltage lockout	R/W word	Yes	Vin Linear	32	32~46	V	-3	VIN_ON should be higher than VIN_OFF, and keep 2V hystersis.
VOUT_OV_FAULT_LIMIT	0x40	Set the output overvoltage fault threshold.	R/W word	Yes	Vout Linear	15	11~16	V	-12	Must be higher than the value of VOUT_COMMAND and VOUT_OV_WARN_LIMIT;

Command	Comman d Code	Command description	Transf -er type	Compatible with standard PMBUS or not?	Data Format	Default value	Range	Data units	Expon -ent	Note
VOUT_OV_FAULT_RESP	0x41	Instructs what action to take in response to an output overvoltage fault.	R/W byte	Refer to below description;	Bit field	0xB8	1	N/A	1	,
VOUT_OV_WARN_LIMIT	0x42	Set a threshold causing an output voltage high warning.	R/W word	Yes	Vout Linear	15	11~16	V	-12	Must be less than VOUT_OV_FAULT_LIMIT value
IOUT_OC_FAULT_LIMIT	0x46	Set the output overcurrent fault threshold.	R/W word	Yes	lout Linear	43	20~60	А	-4	Must be greater than IOUT_OC_WARN_LIMIT value
IOUT_OC_FAULT_RESPO	0x47	Instructs what action to take in response to an output overcurrent fault.	R/W byte	Refer to below description;	Bit field	0xF8	1	N/A	1	1
IOUT_OC_WARN_LIMIT	0x4A	Set a threshold causing an output current high warning.	R/W word	Yes	lout Linear	36	10~40	А	-4	Must be less than  IOUT_OC_FAULT_LIMIT value
OT_FAULT_LIMIT	0x4F	Set the over temperature fault threshold.	R/W word	Yes	TEMP Linear	125	25~140	Deg.	-2	Must be greater than  OT_WARN_LIMIT value
OT_FAULT_RESPONSE	0x50	Instructs what action to take in response to an over temperature fault.	R/W byte	Refer to below description;	Bit field	0xB8	1	N/A	/	1
OT_WARN_LIMIT	0x51	Set a threshold causing a temperature high warning.	R/W word	Yes	TEMP Linear	115	25~125	Deg.	-2	Must be less than OT_FAULT_LIMIT value
VIN_OV_FAULT_LIMIT	0x55	Set the input overvoltage fault threshold.	R/W word	Yes	Vin Linear	110	48~110	V	-3	1
POWER_GOOD_ON	0x5E	Sets the output voltage at which the bit 3 of STATUS_WORD high byte should be asserted.	R/W word	Yes	Vout Linear	11	8.1 ~13.2	V		Must be greater than POWER_GOOD_OFF value by 1.6V
POWER_GOOD_OFF	0x5F	Sets the output voltage at which the bit 3 of STATUS_WORD high byte should be negated.	R/W word	Yes	Vout Linear	9	8.1 ~13.2	V		Must be less than POWER_GOOD_ON value by 1.6V
TON_DELAY	0x60	Sets the time from a start condition is received until the output voltage starts to rise	R/W word	Yes	Time Linear	7	5~500	ms	-1	/

Command	Comman d Code	Command description	Transf -er type	Compatible with standard PMBUS or not?	Data Format	Default value	Range	Data units	Expon -ent	Note
TON_RISE	0x61	Sets the time from the output starts to rise until the voltage has entered the regulation band.	R/W word	Yes	Time Linear	28	15~500	ms	-1	I
STATUS_WORD	0x79	Returns the information with a summary of the module's fault/warning	Read	Refer to below description;	Bit field	1	1	1	/	I
STATUS_VOUT	0x7A	Returns the information of the module's output voltage related fault/warning	Read byte	Refer to below description;	Bit field	1	1	1	1	1
STATUS_IOUT	0x7B	Returns the information of the module's output current related fault/warning	Read byte	Refer to below description;	Bit field	1	1	1	/	1
STATUS_INPUT	0x7C	Returns the information of the module's input over voltage and under voltage fault	Read byte	Refer to below description;	Bit field	1	1	1	/	1
STATUS_TEMPERATURE	0x7D	Returns the information of the module's temperature related fault/warning	Read byte	Refer to below description;	Bit field	1	1	1	/	I
STATUS_CML	0x7E	Returns the information of the module's communication related faults.	Read byte	Refer to below description;	Bit field	1	1	1	1	I
READ_VIN	0x88	Returns the input voltage of the module	Read word	Yes	Vin Linear	1	1	Volts	/	1
READ_VOUT	0x8B	Returns the output voltage of the module	Read word	Yes	Vout Linear	1	1	Volts	/	1
READ_IOUT	0x8C	Returns the output current of the module	Read	Yes	lout Linear	1	1	Amps	1	1
READ_TEMPERATURE_1	0x8D	Returns the module's hot spot temperature of the module	Read	Yes	TEMP Linear	1	1	Deg.	/	1
PMBUS_REVISION	0x98	Reads the revision of the PMBus	Read byte	Yes	Bit field	1.2	1	/	/	1

Command	Comman d Code	Command description	Transf -er type	Compatible with standard PMBUS or not?	Data	Default value	Range limit	Data units	Expon -ent	Note
MFR_ C2_Configure	0xE1	Configures the C2 pin (secondary on/off pin) function and logic;	R/W byte	Refer to below description;	Bit field	0x00	1	1	1	I

### OPERATION [0x01]

Bit number	Purpose	Bit Value	Meaning	Default Settings , 0x80
7:	Enable/Disable the module	1	Output is enabled	1
		0	Output is disabled	
6:0	Reserved			0000000

### ON\_OFF\_CONFIG [0x02]

Bit number	Purpose	Bit Value	Meaning	Default Settings , 0x1D (negative) /0x1F (positive)
7:5	Reserved			000
4	Controls how the unit responds to the primary on/off pin and the	1	Module does not power up until commanded by the primary ON/OFF pin and the OPERATION	1
	OPERATION command;	0	Module power up at any time regardless of the state of the primary ON/OFF pin and the OPERATION	
3	Controls how the unit responds to	1	Module responds to the 7 bit in the OPERATION	1
	the OPERATION command	0	Module ignores the 7 bit in the OPERATION	
2	Controls how the unit responds to the primary on/off pin	1	Module requires the primary ON/OFF pin to be asserted to start the unit	1
		0	Module ignores the state of the primary ON/OFF pin	
1	Control logic of primay on/off pin	1	Positive Logic	0, negative;
		0	Negative Logic	1, positive.
0	Unit turn off delay time control	1	Shut down the module with 0 delay cycle	1

### VOUT\_OV\_FAULT\_RESPONSE [0x41]

Bit number	Purpose	Bit Value	Meaning	Default Settings , 0xB8
7:6	Response settings	10	Unit shuts down and responds according to the retry settings	10
5:3	Retry setting	111	Unit continuously restarts while fault is present until commanded off	111
		000	Unit does not attempt to restart on fault	
2:0	Delay time setting	000	No delay supported	000

### IOUT\_OC\_FAULT\_RESPONSE [0x47]

Bit number	Purpose	Bit Value	Meaning	Default Settings , 0xF8
7:6	Response settings	11	Unit shuts down and responds according to the retry settings	11,
5:3	Retry settings	111	Unit continuously restarts while fault is present until commanded off	111
		000	Unit does not attempt to restart on fault	
2:0	Delay time setting	000	No delay supported	000

### OT\_FAULT\_RESPONSE [0x50]

Bit number	Purpose	Bit Value	Meaning	Default Settings , 0xB8
7:6	Response settings	10	Unit shuts down and responds according to the	10,
			retry settings	
5:3	Retry settings	111	Unit continuously restarts while fault is present until commanded off	111
		000	Unit does not attempt to restart on fault	
2:0	Delay time setting	000	No delay supported	000

### STATUS\_WORD [0x79]

### High byte

Bit number	Purpose	Bit Value	Meaning
7	An output over voltage fault or warning	1	Occurred
		0	No Occurred
6	An output over current fault or warning	1	Occurred
		0	No Occurred
5	An input voltage fault, including over voltage and undervoltage	1	Occurred
		0	No Occurred
4	Reserved		
3	Power_Good	1	is negated
		0	ok
2:0	Reserved		

### Low byte

Bit number	Purpose	Bit Value	Meaning
7	Reserved		
6	OFF (The unit is not providing power to the output, regardless of the	1	Occurred
	reason)	0	No Occurred
5	An output over voltage fault	1	Occurred
		0	No Occurred
4	An output over current fault	1	Occurred
		0	No Occurred
3	An input under voltage fault	1	Occurred
		0	No Occurred
2	A temperature fault or warning	1	Occurred
		0	No Occurred
1	CML (A communications, memory or logic fault )	1	Occurred;
		0	No Occurred
0	Reserved		

### STATUS\_VOUT [0x7A]

Bit number	Purpose	Bit Value	Meaning
7	Output over voltage fault	1	Occurred;
		0	No Occurred
6	Output over voltage warning	1	Occurred;
		0	No Occurred
5:0	Reserved		

### STATUS\_IOUT [0x7B]

Bit number	Purpose	Bit Value	Meaning
7	Output over current fault	1	Occurred ;
		0	No Occurred
6	Reserved		
5	Output over current warning	1	Occurred ;
		0	No Occurred
4:0	Reserved		

### STATUS\_INPUT [0x7C]

Bit number	Purpose	Bit Value	Meaning
7	Input over voltage fault	1	Occurred;
		0	No Occurred
6: 5	Reserved		
4	Input under voltage fault	1	Occurred;
		0	No Occurred
3:0	Reserved		

### **STATUS\_TEMPERATURE [0x7D]**

Bit number	Purpose	Bit Value	Meaning
7	Over temperature fault	1	Occurred;
		0	No Occurred
6	Over temperature warning	1	Occurred;
		0	No Occurred
5:0	Reserved		

### STATUS\_CML [0x7E]

Bit number	Purpose	Bit Value	Meaning
7	Invalid/Unsupported Command Received	1	Occurred;
		0	No Occurred
6	Invalid/Unsupported Data Received	1	Occurred;
		0	No Occurred
5	Packet Error Check Failed	1	Occurred;
		0	No Occurred
4:0	Reserved		

### MFR\_ C2\_Configure [0xE1]

Bit	Purpose	Bit Value	Meaning	Default Settings ,
number				0x00
7:2	Reserved			000000
1	Secondary ON/OFF	1	AND – Primary and Secondary side on/off	0
	Configuration	0	C2 is ignored	
0	Secondary side on/off	1	Positive Logic	0
	Logic	0	Negative Logic	

### **Output Voltage Adjustment (TRIM)**

To increase or decrease the output voltage set point, connect an external resistor between the TRIM pin and either the Vo(+) or Vo(-). The TRIM pin should be left open if this feature is not used. Below Trim equation is only adapt to the module without droop current sharing option code; For the module with droop current sharing option code, please contact Delta's technical support team.

 


Figure 19: Circuit configuration for trim-down (decrease output voltage)

If the external resistor is connected between the TRIM and Vo (-) pins, the output voltage set point decreases (Fig. 19). The external resistor value required to obtain a percentage of output voltage change % is defined as:

$$Rtrim - down = \left[\frac{511}{\Delta} - 10.2\right] (K\Omega)$$

Ex. When Trim-down -10% (12V×0.9=10.8V)

$$Rtrim - down = \left[\frac{511}{10} - 10.2\right] (K\Omega) = 40.9 (K\Omega)$$

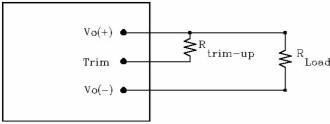


Figure 20: Circuit configuration for trim-up (increase output voltage)

If the external resistor is connected between the TRIM and Vo (+) the output voltage set point increases (Fig. 20). The external resistor value required to obtain a percentage output voltage change % is defined as:

$$Rtrim - up = \frac{5.11 \text{Vo} (100 + \Delta)}{1.225 \,\Delta} - \frac{511}{\Delta} - 10.2 \big( K\Omega \big)$$

Ex. When Trim-up +10% (12V×1.1=13.2V)

$$Rtrim - up = \frac{5.11 \times 12 \times (100 + 10)}{1.225 \times 10} - \frac{511}{10} - 10.2 = 489.3 (K\Omega)$$

Care should be taken to ensure that the maximum output power of the module remains at or below the maximum rated power.

### THERMAL CONSIDERATIONS


Thermal management is an important part of the system design. To ensure proper, reliable operation, sufficient cooling of the power module is needed over the entire temperature range of the module. Convection cooling is usually the dominant mode of heat transfer.

Hence, the choice of equipment to characterize the thermal performance of the power module is a wind tunnel.

### **Thermal Testing Setup**

Delta's DC/DC power modules are characterized in heated vertical wind tunnels that simulate the thermal environments encountered in most electronics equipment. This type of equipment commonly uses vertically mounted circuit cards in cabinet racks in which the power modules are mounted.

The following figure shows the wind tunnel characterization setup. The power module is mounted on a test PWB and is vertically positioned within the wind tunnel. The space between the neighboring PWB and the top of the power module is constantly kept at 6.35mm (0.25").

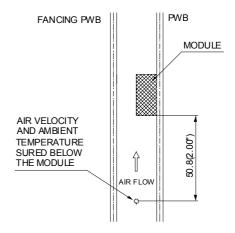

Note: Wind Tunnel Test Setup Figure Dimensions are in millimeters and (Inches)

Figure 21: Wind tunnel test setup

### **Thermal Derating**

Heat can be removed by increasing airflow over the module. To enhance system reliability; the power module should always be operated below the maximum operating temperature. If the temperature exceeds the maximum module temperature, reliability of the unit may be affected.

# THERMAL CURVES (WITHOUT HEAT SPREADER)

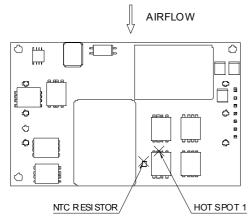


Figure 22: \* Hot spot 1& NTC resistor temperature measured points

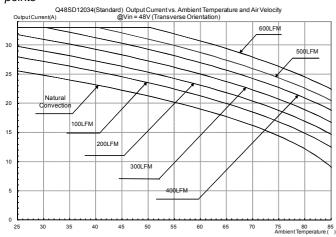


Figure 23: Output current vs. ambient temperature and air velocity @Vin=48V(Transverse Orientation, airflow from Vin+ to Vin-, without heat spreader)

## THERMAL CURVES (WITH HEAT SPREADER)

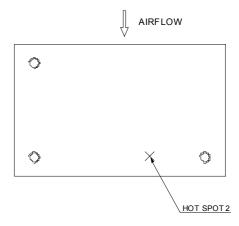
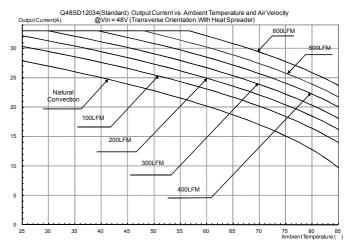



Figure 24: \* Hot spot 2 temperature measured point




**Figure 25:** Output current vs. ambient temperature and air velocity @Vin=48V(Transverse Orientation, airflow from Vin+ to Vin-,with heat spreader)

### **MECHANICAL DRAWING (WITH HEAT SPREADER)**

\*For modules with through-hole pins and the optional heat spreader, they are intended for wave soldering assembly onto system boards, please do not subject such modules through reflow temperature profile.

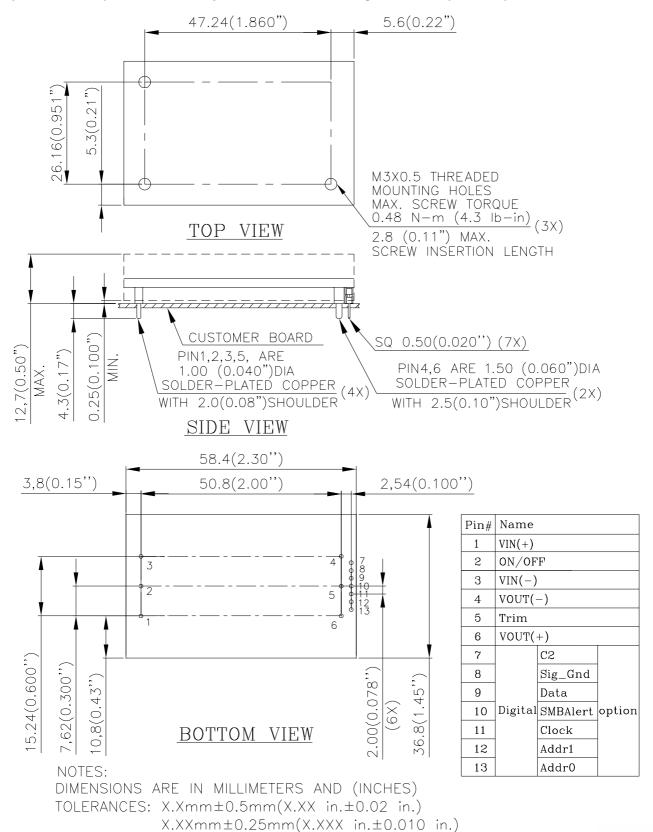

### **MECHANICAL DRAWING (WITHOUT HEAT SPREADER)**

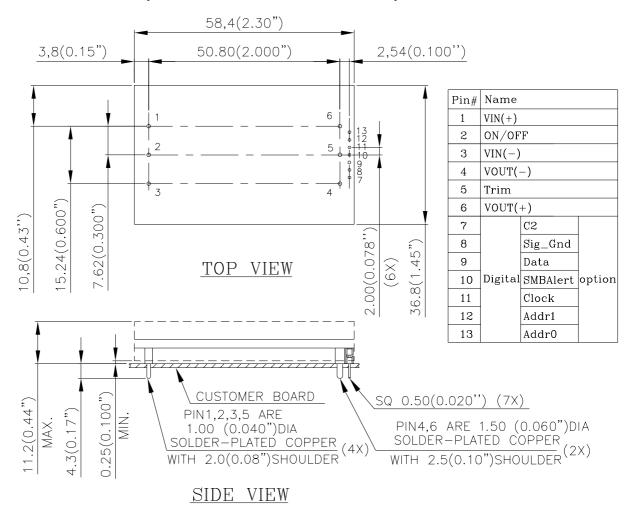

NOTES:

DIMENSIONS ARE IN MILLIMETERS AND (INCHES)
TOLERANCES: X.Xmm±0.5mm(X.XX in.±0.02 in.)
X.XXmm±0.25mm(X.XXX in.±0.010 in.)

### **Pin Specification:**

Pins 1-3&5 Pins 4 &6 Pins 7-13 1.00mm (0.040") diameter (All pins are copper with matte Tin plating over Nickel under plating) 1.50mm (0.059") diameter (All pins are copper with matte Tin plating over Nickel under plating) SQ 0.50mm(0.020") (All pins are copper with gold flash plating)

### PART NUMBERING SYSTEM

Q	48	S	D	120	34	N	R	F		Α			
Type of Product	Input Voltage	Number of Outputs	Product	Output Voltage	Output Current	ON/OFF Logic	Pin Length /Type			Option Code			
										Droop Current Sharing	Trim pin	PMBus pin	Heat spreader
Q- Quarter	48-		D – Full			N -	K – 0.110" N - 0.145"	F- RoHS 6/6	Α	Yes	Has, but no function	Yes	No
Brick	36~75V	S- Single	digital	120 - 12V	34 - 34A	Negative	R - 0.170"		В	No	Yes	No	No
			control					(Lead Free)	С	No	Yes	No	Yes
									Н	Yes	Has, but no function	Yes	Yes
									G	No	Yes	Yes	Yes

### **MODEL LIST**

MODEL NAME	INI	PUT	OU.	TPUT	EFF @ 100% LOAD
Q48SD12034NRFA	Q48SD12034NRFA 36V~75V 12.5A		12V	34A	95.5%

Default remote on/off logic is negative and pin length is 0.170"

For different remote on/off logic and pin length, please refer to part numbering system above or contact your local sales office.

### CONTACT: www.delta.com.tw/dcdc

USA:

Telephone: East Coast: 978-656-3993 West Coast: 510-668-5100 Fax: (978) 656 3964

Email: DCDC@delta-corp.com

Europe:

Telephone: +41 31 998 53 11 Fax: +41 31 998 53 53 Email: DCDC@delta-es.tw

Asia & the rest of world:

Telephone: +886 3 4526107 x 6220~6224

Fax: +886 3 4513485 Email: DCDC@delta.com.tw

### **WARRANTY**

Delta offers a two (2) year limited warranty. Complete warranty information is listed on our web site or is available upon request from Delta.

Information furnished by Delta is believed to be accurate and reliable. However, no responsibility is assumed by Delta for its use, nor for any infringements of patents or other rights of third parties, which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Delta. Delta reserves the right to revise these specifications at any time, without notice.