




Kit 67110-3 OSD KIT

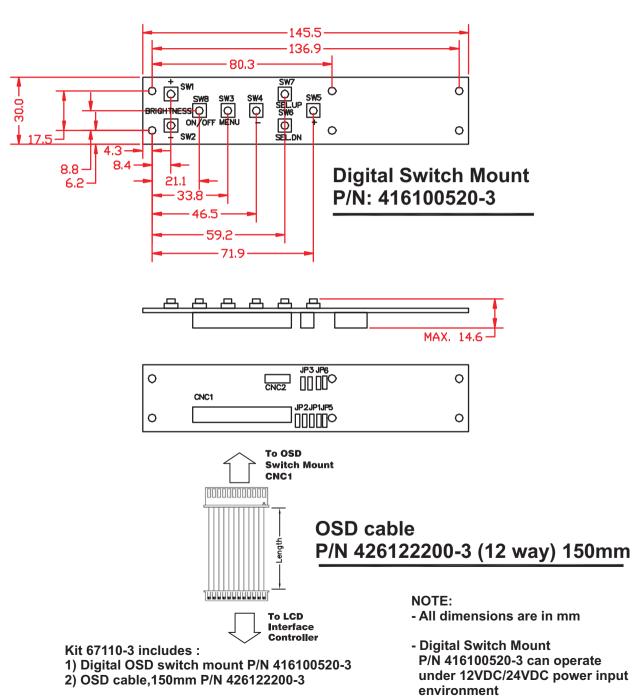

| CNC1 Pin Assignment | |
|---------------------------|----------------------|
| Connector : JST B12B-XH-A | |
| pin # | description |
| 12 | no connection |
| 11 | OSD Select UP |
| 10 | OSD Select Down |
| 9 | OSD Plus/Right |
| 8 | OSD Minus/Left |
| 7 | OSD Menu |
| 6 | Ground |
| 5 | Backlight Brightness |
| | VR pin B |
| 4 | Backlight Brightness |
| | VR pin WIP |
| 3 | Backlight Brightness |
| | - |
| 2 | Power Switch B |
| 1 | Power Switch A |
| | |

| CNC2 Pin assignment Connector : Hirose DF13—9F | |
|---|---------------------------|
| pin # | description |
| 9 | Ground |
| 8 | Adjust Down/Decrease/Left |
| 7 | Adjust Up/Increase/Right |
| 6 | Select Down |
| 5 | Select Up |
| 4 | Ground |
| 3 | No connection |
| 2 | No connection |
| 1 | Power On/Off |

Jumper setting : JP1: SWAP DEC/INC SWITCH 1-2,3-4 closed : NORMAL 1-3,2-4 closed : SWAPPED

JP2 : SWAP SEL UP/DN SWITCH 1-2,3-4 closed : NORMAL 1-3,2-4 closed : SWAPPED

JP3 : SWAP BRIGHTNESS INC/DEC SWITCH 1-2,3-4 closed : NORMAL 1-3,2-4 closed : SWAPPED

JP5 : 1-2 closed : Disable On/Off power button control Open : Enable On/Off power button control(Default)

JP6 : 1-2 closed : Default power on (JP5 set open) 3-4 closed: Defalt power off (JP5 set open)