

MPLAB[®] C18 C COMPILER GETTING STARTED

© 2002 Microchip Technology Inc.

Note the following details of the code protection feature on PICmicro[®] MCUs.

- The PICmicro family meets the specifications contained in the Microchip Data Sheet.
- Microchip believes that its family of PICmicro microcontrollers is one of the most secure products of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the PICmicro microcontroller in a manner outside the operating specifications contained in the data sheet. The person doing so may be engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable".
- Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our product.

If you have any further questions about this matter, please contact the local sales office nearest to you.

Information contained in this publication regarding device applications and the like is intended through suggestion only and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. No representation or warranty is given and no liability is assumed by Microchip Technology Incorporated with respect to the accuracy or use of such information, or infringement of patents or other intellectual property rights arising from such use or otherwise. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip. No licenses are conveyed, implicitly or otherwise, under any intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, KEELOQ, MPLAB, PIC, PICmicro, PICSTART and PRO MATE are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AMPLAB, FilterLab, microID, MXDEV, MXLAB, PICMASTER, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

dsPIC, dsPICDEM.net, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, microPort, Migratable Memory, MPASM, MPLIB, MPLINK, MPSIM, PICC, PICDEM, PICDEM.net, rfPIC, Select Mode and Total Endurance are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

Serialized Quick Turn Programming (SQTP) is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2002, Microchip Technology Incorporated. Printed in the U.S.A., All Rights Reserved.





Microchip received QS-9000 quality system certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona in July 1999 and Mountain View, California in March 2002. The Company's quality system processes and procedures are QS-9000 compliant for its PICmicro® 8-bit MCUs, KEELoo® code hopping devices, Serial EEPROMs, microperipherals, non-volatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001 certified.



MPLAB[®] C18 C COMPILER GETTING STARTED

Table of Contents

Preface	1
Chapter 1. Overview	
1.1 Introduction 1.2 Highlights	7 7
1.3 System Requirements 1.4 Quick Directory Tour 1.5 About the Language Tools	
Chapter 2. Installation	
2.1 Introduction	
2.2 Highlights	
2.3 Installing MPLAB C18	
2.4 Uninstalling MPLAB C18	
Chapter 3. Examples of Use	
3.1 Introduction	
3.2 Highlights	
3.3 Example 1	
3.4 Example 2	
3.5 Example 3	
3.6 Example 4	
Glossary	45
Index	51
Worldwide Sales and Service	52



MPLAB[®] C18 C COMPILER GETTING STARTED

Preface

INTRODUCTION

The purpose of this document is to help you get up and running with Microchip's MPLAB C18 C compiler.

HIGHLIGHTS

Items discussed in this chapter are:

- · About this Guide
- Recommended Reading
- Warranty Registration
- Troubleshooting
- The Microchip Internet Web Site
- Development Systems Customer Notification Service
- Customer Support

ABOUT THIS GUIDE

Document Layout

This document describes how to install/uninstall MPLAB C18 and provides several examples of writing C code for PICmicro[®] microcontroller applications. For a detailed discussion about basic MPLAB IDE v6.xx functions, refer to the MPLAB IDE Help on-line help file.

This document includes:

- Chapter 1: Overview defines system requirements and provides a brief description of the installed programs and directories created by the installation process.
- Chapter 2: Installation provides instructions on how to install the compiler onto your system. Also provides uninstall instructions.
- Chapter 3: Examples of Use uses a tutorial style to illustrate effective use of the MPLAB C18 C compiler. All examples use MPLAB IDE v6.xx with PIC18F452 as the selected device and MPLAB SIM simulator as a debug tool. Some examples use the additional tools MPLAB ICD 2 in-circuit debugger and PICDEM[™] 2 Plus demo board.
 - **Example 1** demonstrates how to set up and build a project; run, step and set breakpoints in the example code; and debug the code.
 - **Example 2** demonstrates the use of the MPLAB C18 peripheral libraries and the C standard library, as well as the allocation of variables into program memory.
 - Example 3 demonstrates the allocation of variables in access RAM.
 - **Example 4** demonstrates the use of interrupt service routines with MPLAB C18 and provides an example of the use of the MPLAB C18 peripheral libraries.

- Glossary A glossary of terms used in this guide.
- · Index Cross-reference listing of terms, features and sections of this document.

Conventions Used in this Guide

This manual uses the following documentation conventions:

Description	Represents	Examples	
Code (Courier font):	·	
Plain characters	Sample code Filenames and paths	#define START c:\autoexec.bat	
Square brackets: []	Optional arguments	MPASMWIN [main.asm]	
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments An OR selection	errorlevel {0 1}	
Ellipses	Used to imply (but not show) additional text	list [<i>list_option,</i> <i>list_option</i>]	
0xnnnn	A hexadecimal number where <i>n</i> is a hexadecimal digit	0xFFFF, 0x007A	
Italic characters	A variable argument	char isascii (char <i>ch</i>);	
Interface (Arial font):			
Underlined, italic text with "arrow"	A menu selection from the menu bar	File > Save	
Bold characters	A window or dialog button to click	OK, Cancel	
Characters in angle brackets: < >	A key on the keyboard	<tab>, <ctrl-c></ctrl-c></tab>	
Documents (Arial font):			
Italic characters	Referenced books	MPLAB IDE User's Guide	

Documentation Updates

All documentation becomes dated, and this guide is no exception. Since MPLAB IDE, MPLAB C18 and other Microchip tools are constantly evolving to meet customer needs, some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site to obtain the latest documentation available.

Documentation Numbering Conventions

Documents are numbered with a "DS" number. The number is located on the bottom of each page, in front of the page number. The numbering convention for the DS Number is: DSXXXXXA,

where:

XXXXX	=	The document number.
A	=	The revision level of the document.

WARRANTY REGISTRATION

Please complete the enclosed Warranty Registration Card and mail it promptly. Sending in your Warranty Registration Card entitles you to receive new product updates. Interim software releases are available at the Microchip web site.

RECOMMENDED READING

For more information on included libraries and precompiled object files for the compilers, the operation of MPLAB IDE and the use of other tools, the following are recommended reading.

README.C18

For the latest information on using MPLAB C18 C compiler, read the README.C18 file (ASCII text) included with the software. This README file contains update information that may not be included in this document.

README.XXX

For the latest information on other Microchip tools (MPLAB IDE, MPLINK[™] linker, etc.), read the associated README files (ASCII text file) included with the MPLAB IDE software.

MPLAB C18 C Compiler User's Guide (DS51288)

Comprehensive guide that describes the operation and features of Microchip's MPLAB C18 C compiler for PIC18 devices.

MPLAB C18 C Compiler Libraries (DS51297)

Reference guide for MPLAB C18 libraries and precompiled object files. Lists all library functions with a detailed description of their use.

MPLAB IDE User's Guide (DS51025)

Comprehensive guide that describes installation and features of Microchip's MPLAB Integrated Development Environment (IDE), as well as the editor and simulator functions in the MPLAB IDE environment.

MPASM[™] User's Guide with MPLINK[™] and MPLIB[™] (DS33014)

This user's guide describes how to use the Microchip PICmicro MCU MPASM assembler, the MPLINK object linker and the MPLIB object librarian.

PIC18 Device Data Sheets

These data sheets describe the operation and electrical specifications of PIC18 devices and may be found on the Technical CD-ROM or the Microchip web site.

Technical Library CD-ROM (DS00161)

This CD-ROM contains comprehensive application notes, data sheets and technical briefs for all Microchip products. To obtain this CD-ROM, contact the nearest Microchip Sales and Service location (see back page).

Microchip Web Site

The Microchip web site (www.microchip.com) contains a wealth of documentation. Individual data sheets, application notes, tutorials and user's guides are all available for easy download. All documentation is in Adobe[™] Acrobat (pdf) format.

Microsoft[®] Windows[®] Manuals

This manual assumes that users are familiar with the Microsoft Windows operating system. Many excellent references exist for this software program, and should be consulted for general operation of Windows.

TROUBLESHOOTING

If you encounter problems with any of the procedures or tutorial steps in this document, please see the README files or other recommended reading documents for additional information. If these are not helpful, check out the Technical Support section of our web site or contact customer support.

ON-LINE SUPPORT

Microchip provides on-line support on the Microchip web site at:

www.microchip.com

A file transfer site is also available by using an FTP service connecting to:

ftp://ftp.microchip.com

The web site and file transfer site provide a variety of services. Users may download files for the latest development tools, data sheets, application notes, user's guides, articles and sample programs. A variety of Microchip specific business information is also available, including listings of Microchip sales offices and distributors. Other information available on the web site includes:

- Latest Microchip press releases
- · Technical support section with FAQs
- Design tips
- Device errata
- Job postings
- · Microchip consultant program member listing
- Links to other useful web sites related to Microchip products
- Conferences for products, development systems, technical information and more
- Listing of seminars and events

CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip started the customer notification service to help our customers keep current on Microchip products with the least amount of effort. Once you subscribe, you will receive email notification whenever we change, update, revise or have errata related to your specified product family or development tool of interest.

Go to the Microchip web site (www.microchip.com) and click on Customer Change Notification. Follow the instructions to register.

The Development Systems product group categories are:

- Compilers
- Emulators
- In-Circuit Debuggers
- MPLAB
- Programmers

Here is a description of these categories:

COMPILERS - The latest information on Microchip C compilers and other language tools. These include the MPLAB C17, MPLAB C18 and MPLAB C30 C Compilers; MPASM and MPLAB ASM30 assemblers; MPLINK and MPLAB LINK30 linkers; and MPLIB and MPLAB LIB30 librarians.

EMULATORS - The latest information on Microchip in-circuit emulators. This includes the MPLAB ICE 2000.

IN-CIRCUIT DEBUGGERS - The latest information on Microchip in-circuit debuggers. These include the MPLAB ICD and MPLAB ICD 2. **MPLAB** - The latest information on Microchip MPLAB IDE, the Windows Integrated Development Environment for development systems tools. This list is focused on the MPLAB IDE, MPLAB SIM simulator, MPLAB IDE Project Manager and general editing and debugging features.

PROGRAMMERS - The latest information on Microchip device programmers. These include the PRO MATE[®] II device programmer and PICSTART[®] Plus development programmer.

CONTACT INFORMATION

Microchip product support is available through:

- Distributors
- Local Sales Offices a list of sales office locations is available at the end of this book.
- Field Application Engineers (FAE)
- Corporate Applications Engineers (CAEs) may be contacted at (480) 792-7627.
- Hot Line

The **Systems Information and Upgrade Line** provides system users with a list of the current versions of all Microchip development systems software products. This line also provides information on how to receive available upgrade kits.

The Hot Line Numbers are:

1-800-755-2345 for U.S. and most of Canada, and

1-480-792-7302 for the rest of the world.

NOTES:



MPLAB[®] C18 C COMPILER GETTING STARTED

Chapter 1. Overview

1.1 INTRODUCTION

Congratulations on your decision to use MPLAB C18, Microchip's C compiler for its PIC18 PICmicro microcontrollers. MPLAB C18 is designed for use with Microchip's MPLINK linker. Both MPLAB C18 and the MPLINK linker can be used with the MPLAB IDE. This document is designed to get you started quickly using MPLAB C18 with the MPLINK linker to develop PICmicro applications with ease. As you read this document, please refer to the *MPLAB C18 C Compiler User's Guide* (DS51288) for more details on the features mentioned.

1.2 HIGHLIGHTS

Items discussed in this chapter include:

- System Requirements
- Quick Directory Tour
- About the Language Tools

1.3 SYSTEM REQUIREMENTS

The minimum system requirements for using MPLAB C18 and the MPLINK linker are:

- 25 MB hard disk space (50 MB recommended)
- Microsoft Windows operating system (95 or later)

1.4 QUICK DIRECTORY TOUR

The MPLAB C18 installation directory contains the readme file for the compiler (readme.c18) and the readme file for the linker (readme.lkr). In addition, a number of subdirectories are also present:

Directory	Description
bin	Contains the executables for the compiler and linker. These are described in more detail in the following section.
срр	Contains the source code for the MPLAB C18 C preprocessor. This source code is provided for general interest.
doc	Contains the MPLAB C18 electronic documentation. Refer to these documents for any questions you may have regarding MPLAB C18.
example	Contains sample applications to help you get started using MPLAB C18, including the examples contained in this document.
h	Contains the header files for the standard C library and the processor-specific libraries for the supported PICmicro microcontrollers.
lib	Contains the standard C library (clib.lib), the processor-specific libraries (p18xxxx.lib, where xxxx is the specific device number) and the startup modules (c018.o, c018i.o, c018iz.o).
lkr	Contains the linker script files.
mpasm	Contains the command-line version of the MPASM assembler, the assembly header files for the devices supported by MPLAB C18 (p18xxxx.inc) and the assembly header files used by the libraries.
src	Contains the source code, in the form of C and assembly files, for the standard C library, the processor-specific libraries and the startup modules.

1.5 ABOUT THE LANGUAGE TOOLS

The bin and mpasm subdirectories of the MPLAB C18 installation directory contain the executables which comprise the MPLAB C18, MPASM assembler and the MPLINK linker. The following is a brief description of these programs.

Executable	Description
mcc18.exe c18demo.exe	This is the C compiler. It takes as input a C source file (e.g., file.c), which is passed to cpp18.exe for preprocessing. For demo versions of MPLAB C18, this file is called c18demo.exe.mcc18.exe then compiles the preprocessed output and generates a COFF file (e.g., file.o) to be passed to the linker.
cpp18.exe	This is the C preprocessor.
mplink.exe	This is the driver program for the linker. It takes as input a linker script, object files and library files and passes these to _mplink.exe. It then takes the output COFF file from _mplink.exe and passes it to mp2cod.exe and mp2hex.exe.
_mplink.exe	This is the linker. It takes as input a linker script (e.g., p18f452.lkr), object files and library files and outputs a COFF executable (e.g., file.out or file.cof). This COFF file is the result of resolving unassigned addresses of data and code of the input object files and referenced object files from the librariesmplink.exe also optionally produces a map file (e.g., file.map) that contains detailed information on the allocation of data and code.
mp2cod.exe	This is the COFF to COD file converter. The COD file is a symbolic debugging file format which is used by the MPLAB IDE v5.xx. mp2cod.exe takes as input the COFF file produced by _mplink.exe and outputs a COD file (e.g., file.cod). It also creates a listing file (e.g., file.lst) that displays the correspondence between the original source code and machine code.
mp2hex.exe	This is the COFF to HEX file converter. The HEX file is a file format readable by a PICmicro programmer such as the PICSTART Plus or the PROMATE II. mp2hex.exe takes as input the COFF file produced by _mplink.exe and outputs a HEX file (e.g., file.hex).
mplib.exe	This is the librarian. It allows for the creation and management of a library file (e.g., file.lib) that acts as an archive for the object files. Library files are useful for organizing object files into reusable code repositories.
mpasm.exe	This is the command-line assembler. It takes as input an assembly source file (e.g., file.asm) and outputs either a COFF file (e.g., file.o) or a HEX file and COD file (e.g., file.hex and file.cod). It also creates a listing file (e.g., file.lst) and an error file (e.g., file.err) which contains any errors or warnings emitted during the assembly process. Assembly source files may include assembly header files (e.g., p18f452.inc), which also contain assembly source code.

More detailed information on the language tools, including their command-line usage, can be found in the *MPLAB C18 C Compiler User's Guide* (DS51288) and the *MPASM User's Guide with MPLINK and MPLIB* (DS33014).



An example of the flow of execution of the language tools is illustrated by the following diagram.



MPLAB[®] C18 C COMPILER GETTING STARTED

Chapter 2. Installation

2.1 INTRODUCTION

This chapter will discuss in detail how to install MPLAB C18 on your system. Should you need to remove it, uninstall directions are provided as well.

2.2 HIGHLIGHTS

Items discussed in this chapter include:

- Installing MPLAB C18
- Uninstalling MPLAB C18

2.3 INSTALLING MPLAB C18

To install MPLAB C18, run the setup program from the CD-ROM. If you are upgrading MPLAB C18, run the upgrade setup program downloaded from the Microchip web site. A series of dialogs will guide you through the setup process.

2.3.1 Welcome

A welcome screen displays the version number of MPLAB C18 that the setup program will install.



Click Next to continue.

2.3.2 Read Me File

The MPLAB C18 readme file is displayed. This file contains important information about this release of MPLAB C18, such as known bugs.

💈 Read Me File	X
Release Notes for MPLAB(r) C18, PICmicro 18Cxx C compiler v2.10 31 August 2002	-
Table of Contents	
 Device Support List Installation test What's new in this release MPLAB Configuration Supplied Libraries Linker scripts Known Problems Contributors Dominibutors How to Contact Microchip Customer Change Notification - Development Systems 	×
< <u>B</u> ack <u>Next></u>	Cancel

After reviewing, click **Next** to continue.

2.3.3 Select Installation Directory

This step allows you to choose the directory where MPLAB C18 will be installed. If you are installing MPLAB C18 for the first time, the default installation directory is C:\mcc18.

If you are upgrading, the setup program attempts to set the default installation directory to the directory of the previous installation. The installation directory for an upgrade must be the directory of the previous installation or upgrade.

Note: Any files in the installation directory and its subdirectories may be either overwritten or removed by the installation process. If you wish to save any files, such as modified linker scripts or library source code from a previous installation, copy those files to a directory outside the installation directory before continuing.

覺 Select Installation Dir	ectory
	MPLAB C18 v2.10 will be installed in the following folder. WARNING: Any file in this directory or one of its subdirectories might be overwritten or removed by the setup program. If you wish to keep any of these files, press 'Cancel' now and save these files to another directory. To choose a different installation directory, press 'Browse'. If you are upgrading, the installation directory must be the directory of the previous installation or upgrade.
	Installation Directory c:\mcc18
	< <u>B</u> ack <u>Next></u> Cancel

After specifying the directory, click Next.

2.3.4 Select Components

You can choose which of these components to install by checking the appropriate box.



Component	Description
Program files	These are the executables for the compiler and linker. Install this component unless you are upgrading and wish to use the executables from the previously installed version.
Assembler files	These include the command-line version of the MPASM assembler (mpasm.exe), the assembly header files for the devices supported by MPLAB C18 ($p18xxxx.inc$) and the assembly header files used by the libraries.
Linker script files	These files are used by the MPLINK linker. There is one file for each supported PICmicro microcontroller. Each file provides a default memory configuration for the processor and directs the linker in the allocation of code and data in the processor's memory. These linker scripts differ from the linker scripts provided with the MPLAB IDE in that these are specifically designed for use with MPLAB C18. Since the MPLINK linker requires a linker script, install this component unless you plan on creating your own linker scripts.
Standard headers	These are the header files for the standard C library and the processor-specific libraries. If you choose to install the standard libraries, these will also be installed.
Standard libraries	This component contains the standard C library, the processor-specific libraries, and the startup modules. See the <i>MPLAB C18 C Compiler Libraries</i> (DS51297) and the <i>MPLAB C18 C Compiler User's Guide</i> (DS51288) for more information on the libraries and startup modules. Since most typical programs use the libraries and a startup module, it is recommended that you install this component.
Documentation	This is the electronic documentation for MPLAB C18.
Examples	These are sample applications to assist you in getting started with MPLAB C18, including the examples described in this document.

Component	Description
Library source code	This is the source code for the standard C library, the processor-specific libraries, and the startup modules. Install this component if you plan on rebuilding the libraries or startup modules.
Preprocessor source code	This is the source code for the preprocessor. It is provided for general interest.

Check the components you want to install, then click Next.

2.3.5 Configuration Options

This dialog allows you to select a particular set of MPLAB C18 configuration options for your system:

월 Configuration Options	
	In the list below, select the checkboxes for the desired configuration options.
	Add MPLAB C18 to PATH environment variable
	Add MPASM to PATH environment variable
	Add header file path to MCC_INCLUDE environment variable
	Modify PATH and MCC_INCLUDE variables for all users
	Update MPLAB IDE v5.xx to use this MPLAB C18
	Update MPLAB IDE v5.xx to use this MPLINK Linker
	Make local default storage class 'static' in MPLAB IDE v5.xx
	Update MPLAB IDE v6.xx to use this MPLAB C18
	Update MPLAB IDE v6.xx to use this MPLINK Linker
	< <u>B</u> ack <u>Next</u> > Cancel

Configuration	Description
Add MPLAB C18 to PATH environment variable	This adds the path of the MPLAB C18 executable (mcc18.exe) and the MPLINK linker executable (mplink.exe) to the front of the PATH environment variable. Doing this allows you to launch the newly installed version of MPLAB C18 and the MPLINK linker at the command shell prompt from any directory.
Add MPASM to PATH environment variable	This adds the path of the MPASM executable (mpasm.exe) to the front of the PATH environment variable. Doing this allows you to launch the newly installed version of the MPASM assembler at the command shell prompt from any directory.
Add header file path to MCC_INCLUDE environment variable	This adds the path of the MPLAB C18 header file directory to the front of the MCC_INCLUDE environment variable. If this variable does not exist, it is created. MCC_INCLUDE is a list of semicolon-delimited directories that MPLAB C18 will search for a header file if it cannot find the file in directory list specified with the $-I$ command-line option. Selecting this configuration option means you will not have to use the $-I$ command-line option when including a standard header file.

Configuration	Description
Modify PATH and MCC_INCLUDE variables for all users	This option appears only if you are logged into a Windows NT or Windows 2000 computer as an administrator. Selecting this configuration will perform the modifications to these variables as specified in the three previous options for all users. Otherwise, only the current user's variables will be affected.
Update MPLAB IDE v5.xx to use this MPLAB C18	This option appears only if the MPLAB IDE v5.xx is installed on your system. Selecting this option configures the MPLAB IDE v5.xx to use the newly installed MPLAB C18.
Update MPLAB IDE v5.xx to use this MPLINK linker	This option appears only if the MPLAB IDE v5.xx is installed on your system. Selecting this option configures the MPLAB IDE v5.xx to use the newly installed MPLINK linker.
Make local default storage class 'static' in MPLAB IDE v5.xx	This option appears only if the MPLAB IDE v5.xx is installed on your system. When this option is in effect, it is as if the C language storage class specifier static were used with all local and formal parameter variable declarations. This allocates these variables in global memory instead of on the stack. In general, statically allocated variables require fewer instructions to access than stack-allocated variables. However, keep in mind that some functions may behave differently depending on the allocation scheme used.
Update MPLAB IDE v6.xx to use this MPLAB C18	This option appears only if the MPLAB IDE v6.xx is installed on your system. Selecting this option configures the MPLAB IDE v6.xx to use the newly installed MPLAB C18.
Update MPLAB IDE v6.xx to use this MPLINK linker	This option appears only if the MPLAB IDE v6.xx is installed on your system. Selecting this option configures the MPLAB IDE v6.xx to use the newly installed MPLINK linker.

Choose configuration options and click Next.

2.3.6 Start Installation

This dialog launches the installation. Once the **Next** button is pressed, all files in the installation directory and its subdirectories will be overwritten or removed.

월 Start Installation	×
	You are now ready to install MPLAB C18 v2.10. Press 'Next' to begin the installation or 'Back' to change the installation information. WARNING: Once the installation begins, any file in the installation directory or one of its subdirectories might be overwritten or removed. To exit the setup program now without overwriting or removing these files, press 'Cancel'.
	< <u>B</u> ack <u>Next</u> Cancel

2.3.7 Complete Installation

Congratulations! You have successfully installed MPLAB C18 on your computer. In the "Installation Complete" dialog, click **Finish**.

For MPLAB C18 to operate properly, you may need to restart your computer. If the "Restart Computer" dialog appears, select **Yes** to restart immediately, or **No** to restart your computer at a later time.

2.4 UNINSTALLING MPLAB C18

To uninstall MPLAB C18, open the Windows control panel and launch "Add/Remove Programs". Select the MPLAB C18 installation in the list of programs and follow the directions to remove the program. This will remove the MPLAB C18 directory and its contents from your computer.

Note: If you are uninstalling an upgraded version of MPLAB C18, the entire installation will be removed; MPLAB C18 cannot be "downgraded".

NOTES:



MPLAB[®] C18 C COMPILER GETTING STARTED

Chapter 3. Examples of Use

3.1 INTRODUCTION

The following examples are intended to illustrate the effective use of MPLAB C18, including how to create and build projects and how to step through programs.

These examples assume that MPLAB C18 and MPLAB IDE v6.xx are installed. Some examples assume MPLAB ICD 2 is installed and connected to a PICDEM 2 Plus demo board with a PIC18F452 device. Please refer to the *PIC18FXX2 Data Sheet* (DS39564) for information regarding processor-specific items such as the special function registers, instruction set and interrupt logic.

3.2 HIGHLIGHTS

Examples presented in this chapter for using MPLAB C18 include:

- **Example 1** demonstrates how to set up and build a project; run, step and set breakpoints in the example code; and debug the code.
- **Example 2** demonstrates the use of the MPLAB C18 peripheral libraries and the C standard library, as well as the allocation of variables into program memory.
- **Example 3** demonstrates the allocation of variables in access RAM.
- **Example 4** demonstrates the use of interrupt service routines with MPLAB C18 and provides an example of the use of the MPLAB C18 peripheral libraries.

3.3 EXAMPLE 1

This example is designed for use with the MPLAB IDE v6.xx, the MPLAB SIM simulator and the PIC18F452 device. It shows how to set up an MPLAB C18 project in the MPLAB IDE, build the project and step through the source code using the MPLAB SIM simulator. Additionally, running the program using the MPLAB ICD 2 with the PICDEM 2 Plus demo board is demonstrated. The example assumes that the directory c:\mcc18 is the MPLAB C18 installation directory.

Here is the source code for the example.

TRISB and PORTB are special function registers on the PIC18F452 device. The PORTB pins are connected to the LEDs on the PICDEM 2 demo board; the TRISB pins configure the PORTB pins for input (1) or output (0).

3.3.1 Setting Up the Project

Select <u>*Project>New*</u> to create a new project. Then enter the name and directory of the project in the dialog that displays and click **OK**.

If you installed the examples with MPLAB C18, then the <code>example\getting_started\example1</code> subdirectory of the MPLAB C18 installation will already contain the source file for this example.

Name:		
example1		
Directory:		
C:\mcc18\examp	ble\getting_started\example1	Browse.

Note: The project name does not have to be the same as the directory name.

You should now see the project tree with a branch for each type of project file.



3.3.2 Select Target Processor

The target processor must be selected before anything else is done with the project. This is accomplished by choosing <u>Configure>Select Device</u>.

🗅 🖙 🖬 🐇 🐂 🖷 😹 🧣 📑 🖉 Select Device	COLUMN TWO IS NOT
Configuration Bits	
Untitled Workspace	
Settings	

For this example, the PIC18F452 device will be used. Select the device and press OK.

S	elect Device	×	
	De <u>v</u> ice:		
	PIC18F452	•	
	PIC18F452		
	PIC18F458 PIC18F6620 PIC18F6720 PIC18F8620 PIC18F8720 dsPIC30F2010	CSTART Plus RO MATE II PLAB ICE 2000 PLAB ICE 4000	
	If you don't see the device device is not supported b please check the Microch updates.	e you need, or if the by the desired tool, hip web site for any	
	URL: <u>http://www.microc</u>	chip.com	
	O <u>K</u> _an	ncel <u>H</u> elp	

3.3.3 Select Project Settings

The MPLAB IDE needs to know which compiler and linker to use. To select MPLAB C18 and the MPLINK linker, first choose *Project>Select Language Toolsuite*.

Image: Select Language Tool Locations Verweit Meters Image: Set Language Tool Locations Set Language Tool Locations	M 💦	IPLAB	IDE										_ 8
New Open Close Set Active Project Header Files Unker Soripts Unker Soripts Save Project Add Files to Project Remove File From Project Set Language Tool Locations	File	Edit	View	Project	Debugger	Programmer	Configu	re Wii	ndow	Help			
Open Close Set Active Project Header Files Object Files Unker Soripts Build All Ctill All Open Find in Project Files Save Project Add Files to Project Remove File From Project Select Language Tool Locations	Ľ	🖻	8	New	•			i i					
Curic (19kerample) Set Active Project Set Active Project Source Files Guickbuild (no .sem file) Alt+F10 Clean Build All Ctrl+F10 Make F10 Build Options Find in Project Files Save Project Add Files to Project Remove File From Project Set Language ToolSuite Set Language Tool Locations		`\mee	18\oven	Open									
Surce Fliss Ouickbuild (no.asm file) Alt+F10 Object Fliss Ubrary Flies Linker Soripts Build All Ctrl+F10 Build Options Find in Project Files Save Project Add Files to Project Remove File From Project Set Language Toolsuite Set Language Tool Locations		ic:\mee18	Blexample\	Close Set A	etivo Broico	•							
Weader Hies Quickbuild (no .asm file) Alt+F10 Object Files Clean Build All Build All Ctrl+F10 Make F10 Build Options • Find in Project Files Save Project Add Files to Project Remove File From Project Select Language Toolsuite Set Language Tool Locations		Sour	rce Files	- Sel A	ctive Projec			_					
Clean Build All Ctrl+F10 Make F10 Build Options ↓ Find in Project Files Save Project Add Files to Project Remove File From Project ↓ Select Language Toolsuite Set Language Tool Locations		Obje	ot Files	Quick	build (no .a:	sm file)	Alt+F10						
Build All Ctrl+F10 Make F10 Build Options • Find in Project Files Save Project Save Project • Add Files to Project Remove File From Project Select Language ToolSuite Set Language Tool Locations		Libr	ary Files	Clean	i -								
Make F10 Build Options • Find in Project Files Save Project Add Files to Project Remove File From Project • Select Language Toolsuite Set Language Tool Locations		in LITIK	er sompts	Build	All		Ctrl+F10)					
Build Options Find in Project Files Save Project Add Files to Project Remove File From Project Select Language Toolsuite Set Language Tool Locations				Make			F10						
Find in Project Files Save Project Add Files to Project Remove File From Project Select Language Toolsuite Set Language Tool Locations				Build	Options			•					
Save Project Add Files to Project Remove File From Project Select Language Toolsuite Set Language Tool Locations				Find i	n Project Fi	les							
Add Files to Project Remove File From Project Select Language Toolsuite Set Language Tool Locations				Save	Project								
Remove File From Project				Add F	iles to Proje	ect							
Select Language Toolsuite Set Language Tool Locations				Remo	ve File Fron	n Project		•					
Set Language Tool Locations	•			Selec	t Language	Toolsuite							
				Set L	anguage To	ol Locations							
									-		_		

A dialog appears to select the language toolsuite. To use the language tools that include MPLAB C18 and the MPLINK linker, select "Microchip C18 Toolsuite" as the active toolsuite. Then click **Set Tool Locations**.

Select Language Tools	suite 🔀
Active Toolsuite:	Microchip C18 Toolsuite
	HI-TECH PICC Toolsuite
	HI-TECH PICC-18 Toolsuite
Toolsuite Contents	Microchip C18 Toolsuite
	Microchip C30 Toolsuite
MPASM Assembler (m Microchip MPASM Toolsuite
MPLINK Object Link	er (mplink.exe)
MPLAB C18 C Comp	iler (mcc18.exe)
1	
L	
Set Tool Locations	OK Cancel Apply

Select "MPLAB C18 C Compiler" and "MPLINK Object Linker", and make sure that the paths are to the newly installed versions of the executables, mcc18.exe and mplink.exe, respectively. Press **OK**.

Set Language Tool Locations	Set Language Tool Locations	×
Registered Tools HI-TECH C Compiler (picc. exe) HI-TECH HICK (picc. exe) HI-TECH PICC18 Toolste HI-TECH18 C Compiler (picc18 exe) Microchip C18 Toolsule MFLAB L181 C Compiler (picc18 exe) MFLAB L181 C Compiler (picc18 exe)	Registered Tools HI-TECH C Compiler (picc.exe) HI-TECH Inter (picc.exe) HI-TECH PICC18 Toolsuite HI-TECH Second (Seve) HI-TECH Second (Seve)	
Location of Selected Tool C:\mcc18\bin\mcc18.exe Browse	C:\mcc18\bin\mplink.exe Browse	
OK Cancel Apply	OK Cancel Apply	

Note: These paths should already be set up correctly if you chose to update the MPLAB IDE 6.xx to use the newly installed compiler and linker in the MPLAB C18 setup program.

The next step is to set the command-line options for the compiler and linker. Choose *Project>Build Options>Project*.

🐺 M	PLAB I	DE												_ 8 ×
File	Edit	View	Project	Debugger	Programmer	Configure	Window	Help)					
D	🗳 🔒	1 8	New				1							
			Open.					-	_	_	_	_	_	_
	2: vmcc i Ic imee18	evample)	Close											
	Source	e Files	Set A	ctive Projec	t									
	Head	er Files t Files	Quick	build (no .a:	sm file)	Alt+F10								
	Libra	ry Files r. Societe	Clean											
1	LITING	r oonpts	Build	All		Ctrl+F10								
1			Make			F10								
1			Build	Options			Proje	ct	J					
1			Find i	n Project Fi	les									
1			Save	Project										
1			Add F	iles to Proje	ect									
1			Remo	ve File Fron	n Project									
			Selec	t Language	Toolsuite									
			Set La	anguage To	ol Locations									
							_							
					PIC18	F452							_	

Enter the paths of the header file and library subdirectories of the MPLAB C18 installation directory on the "General" tab. MPLAB C18 will search for included .h files in the specified header file directory. The MPLINK linker will search for object and library files, including those specified in the linker script, in the library directory. "Output Directory" is the final destination for files that result only from a complete build of the project — the .cod, .cof and .hex files. Leave "Output Directory" blank; as a result, the output file (example1.cof) will be placed in the project directory.

"Intermediates Directory" is where the object files produced by the compiler will be placed. Leave this entry blank as well; as a result, the object file (example1.0) will be placed in the same directory as the source file.

The MPLINK linker will search the directory specified in "Linker-Script Path" for linker scripts. Since we will specify the location of the linker script when we add it to the project tree, this entry can also be left blank for this example.

Build Options	<u>?</u> ×
General MPASM Assembler MPLINK Linker MPLAB C18	
Output Directory, \$(BINDIR):	
	Browse
Intermediates Directory, \$(TMPDIR):	
	Browse
Assembler Include Path, \$(AINDIR):	
	Browse
Include Path, \$(INCDIR):	
	Browse
Library Path, \$(LIBDIR):	
	Browse
Linker-Script Path, \$(LKRDIR):	
	Browse
Help	
OK Cancel	Apply

3.3.4 Select Compiler and Linker Settings

The various command-line options which are passed to the compiler and linker can be set on the "MPLAB C18" and "MPLINK Linker" tabs, respectively, in the Build Options window. For this example, we will accept the default command-line options for MPLAB C18.

Build Options	<u>? ×</u>
General MPASM Assembler MPL	INK Linker MPLAB C18
General	-
Generate Command Line	
Treat 'char' as unsigned	Enable integer promotions
Diagnostics level:	Default storage class:
Errors and warnings	Auto
Inherit global settings	Add Remove Remove All Restore Defaults
-OtOb-	
Use Alternate Settings	
	OK Cancel Apply

By default, when the MPLINK linker is run from the MPLAB IDE, it will not generate a map (example1.map) file. To change this, select "Generate map file" on the "MPLINK Linker" tab. Press **OK**. We will use the default settings for the remainder of the command-line options.

Build Options							
General MPASM Assembler MPLINK Linker MPLAB C18							
(All Options)							
Generate Command Line							
Hex-File Format Image: INHX32 Image: Image							
Output Filename Root (no leading directories, no extension)							
Inherit global settings //mtiTABGETRASE) cof"							
Use Alternate Settings							
/o\$(TARGETBASE).cof							
OK Cancel Apply							

3.3.5 Add Files to Project

We must add the C source file to the project. Click the right mouse button on "Source Files" in the project window. Select "Add Files".

🔲 C:\mcc18\exan	nple\getting_starte	ed\example1\example1.mcw	
⊡ (C:\mcc18\example	\getting_started\examp	le1\example1.mcp*]	
Header File	Add Files		
Object Files	Filter		
Linker Scripts			
<u> </u>			

If you chose c:\mcc18\example\getting_started\example1 as the project directory, you will see that the source file example1.c already exists there. Browse to this directory and select the file example1.c. Press **Open** to add the file to the project.

Insert Files I	nto Project		<u>? ×</u>
Look in: 🔁) example1	🔻 🗧 (* 💷
example1.c			
I			
File name:	example1.c		Open
Files of type:	All Source Files (*.asm;*.c)	•	Cancel
🔽 Insert file	s with relative paths		

Note: With "Insert files with relative paths" checked, the file's location will be stored as a path relative to the project directory. This allows the project to be built if it is moved to another directory, so long as all relative file paths remain the same.

The source file should appear in the project tree.



The header file is specified in the C source file; therefore no file needs to be added to "Header Files" in the project tree. You may add a header file to "Header Files" for convenient viewing of the file, but it is only required that the header file be included in the C source code to build the project. The required startup module, standard library and processor library are specified in the linker script, and so no file needs to be added to "Object Files" or "Library Files" in the project tree. If there were other object files or library files to link in the project, we would add them under these branches.

The MPLINK linker requires a linker script to be specified. Click the right mouse button on "Linker Scripts" in the project window, and select **Add Files**.

🗖 C:\mcc18\exar	nple\getting_started	\example1\example1.mcw	- D ×
E- [C:\mcc18\example	l/getting_started/example	1\example1.mcp*]	
🗄 - Source Files			
example1.	c		
Header Files			
Object Files			
Library Files			
Linker Scripts	Add Files		
	Filter		

Use the linker script 18f452.lkr in the lkr subdirectory of the MPLAB C18 installation directory. This script is for the PIC18F452 device.

Press **Open** to add the file to the project tree.

Insert Files In	to Project			? X
Look in: 🔂	lkr	•	🗢 🗈 💣 🏢	•
🗒 18f242.lkr	i8f258.lkr	18f452.lkr	🗎 18f6720.lkr	
🗒 18f242i.lkr	🗒 18f258i .lkr	🗒 18f452i.lkr	🗒 18f6720i.lkr	
🗒 18f248.lkr	🗒 18f442.lkr	I8f458.lkr	🗒 18f8620.lkr	
🗒 18f248i.lkr	🗒 18f442i.lkr	🗒 18f458i.lkr	🗒 18f8620i .lkr	
≝ 18f252.lkr	🗒 18f448.lkr	IBf6620.lkr	🗒 18f8720.lkr	
🖹 18f252i.lkr	🗒 18f448i .lkr	🗒 18f6620i.lkr	🗎 18f8720i.lkr	
•				•
File <u>n</u> ame:	18f452.lkr			en
Files of <u>type</u> :	Linker Scripts (*.lkr)		▼ Car	ncel
Insert files	with relative paths			

3.3.6 Build the Project

Select <u>*Project>Build All*</u> to compile and link the project. If there are any error or warning messages, they will appear in the output window.



For this example, the output window should display no errors and a message stating the output file was successfully built. If there were any errors, check to see that the content of the source file matches the program text displayed at the beginning of **3.3 "Example 1"**.

🗖 Output	
Build Find in Files	
MP2COD 3.10.03, COFF to COD File Converter Copyright (c) 2002 Microchip Technology Inc. Errors : 0	
MP2HEX 3.10.03, COFF to HEX File Converter Copyright (c) 2002 Microchip Technology Inc. Errors : 0	
Loaded C:\mcc18\example\getting_started\example1\example1 BUILD SUCCEEDED	cof
▼	

3.3.7 Debugging with the MPLAB SIM Simulator

With the MPLAB SIM Simulator, you can set breakpoints in the source code and observe the value of variables with a watch window. First, make sure that the MPLAB SIM Simulator is selected as the debugging tool by selecting <u>Debugger>Select</u>. <u>Tool>MPLAB SIM</u>.

File Edit View Project	Debugger Programme	r Configure Window Help
□ 🛩 🖬 🐰 🐂 🖷	Select Tool Clear All Memory	None
C:\mcc18\example\getting_star	RunFSHaltF6Step IntoF7Step OverF8Reset	MPLAB ICE 4000 MPLAB SIM MPLAB ICE 2000 dsPIC SIM
- 18f452.lkr	Breakpoints F2 Stopwatch Stimulus Refresh PM Settings	2

Open the source file by double-clicking on it in the project tree. In the source file, place the cursor over the line on that you wish to set the breakpoint, and click the right mouse button. Select "Set Breakpoint".



The red dot in the gutter along the side of the source window indicates that the breakpoint has been set and is enabled.



To open a watch window on the variable counter, select *View>Watch*.



Select counter from the menu next to Add Symbol, and press Add Symbol.

🗖 Watch		
Add SFR ADCONG	Add Symbol counter	•
Address	Symbol Name	Value
008A	counter	0000
Watch 1 Watch 2	Watch 3 Watch 4	

Press **Run** on the toolbar 🕑 to run the program.

The program should halt just before the statement at the breakpoint is executed. The green arrow in the gutter of the source window points to the next statement to be executed. The watch window should show counter with a value of 1.



Press **Run** again to continue the program. Execution should halt again at the breakpoint. The watch window should show counter with a value of 2.

🗖 Watch	
Add SFR ADCONO	Add Symbol counter
Address	Symbol Name Value
008A	counter 0002
	mg Started with MPLAB (18"
	ing started with maxiely .
Watch 1 Watch 2	Watch 3 Watch 4
	<pre>#include <p18cxxx.h> /* for TRISB and PORTB declarations */</p18cxxx.h></pre>
	int counter;
	void main (void)
	counter = 1;
	TRISB = 0; /* configure PORTB for output */
	while (counter <= 15)
	PORIB = counter; /* display value of 'counter' on the LEDS *.



To step through the source code one statement at a time, use **Step Into** on the toolbar . As each statement executes, the green arrow in the gutter of the source window moves to the next statement to be executed.

If the program is running, it can be halted by pressing Halt on the toolbar



3.3.8 Map and Listing Files

The map file (example1.map) and listing file (example1.lst) are present in the project directory and may be opened by selecting <u>*File>Open*</u>, and then browsing to the project directory. These files provide additional information which may be useful in debugging, such as details of allocation of variables and the correspondence between machine code and source code. For example, the map file shows that the variable counter has been allocated to address 0x80 in data memory, and it was defined in example1.c as a non-static global variable, thus giving it external linkage (visibility to other modules).

EXAMPLE 3-1: MAP FILE

Name	Symbols - Address	- Sorted by Location	Address Storage	File	
counter	0x00008a	data	extern	c:\mcc18\getting	started\example1\example1.c

The listing file shows the machine code generated for each statement the main function. For each instruction, its address, raw value and disassembly is displayed.

EXAMPLE 3-2: LISTING FILE

Address	Value	Disasse	embly	Source
				<pre>#include <pl8cxxx.h> /* for TRISB and PORTB declarations */</pl8cxxx.h></pre>
				int counter; void main (void)
000002	0001	MOVIW	0.v1	l
000002	0100	MOVIR	0~0	
0000000	6582	MOVUB	$0 \times 8 \Rightarrow 0 \times 1$	
0000000	618h	CLPE	0x0a,0x1	
0000000	6203	CLRF	0x02,0x1	TPICP = 0, /* configure POPTP for output */
0000ea	519h	MOVE	0x95,0x0 0x8b $0x0$ $0x1$	while (counter $< -$ 15)
0000000	0200	YODI W	0x0	while (counter <= 13)
00000000	2008	BTECC	0x0	
000010	d002	BRA	0xf8	
000012	358h	RLCF	0x8b 0x0 0x1	
000014	d005	BRA	0x102	
000010		MOVIW	0xf	
000010	8048	BSE	0xd8 0x0 0x0	
00001a	558a	SUBEWB	0x8a 0x0 0x1	
00001C	0e00	MOVIW	0x00,0x0,0x1	
000100	558b	SUBFWB	0x8b.0x0.0x1	
000102	e306	BNC	0x110	
00010e	d7ee	BRA	0xec	
000100	u, 00	Ditti	01100	{
000104	c08a	MOVFF	0x8a.0xf81	PORTB = counter: /* display 'counter' on the LEDs */
000106	ff81			
000108	2b8a	INCF	0x8a,0x1,0x1	counter++;
00010a	0e00	MOVLW	0x0	
00010c	238b	ADDWFC	0x8b,0x1,0x1	
				}
000110	0012	RETURN	0x0	}
Debuggin	g with	the MPLAB	ICD 2	

The MPLAB ICD 2 can be used to actually program the device and step through the application. To do this, the project must be rebuilt with a linker script designed for use with the MPLAB ICD 2. In the project window, click the right mouse button on the file 18f452.lkr under "Linker Scripts", and press **Remove**.



Add the linker script file 18f452i.lkr from the 1kr subdirectory of the MPLAB C18 installation directory under "Linker Scripts" in the project tree. This linker script allocates memory for resources used by the MPLAB ICD 2. The 'i' in the file's name indicates this linker script is for use with the MPLAB ICD 2.

Rebuild the project by selecting *Project>Build All*.

To use the MPLAB ICD 2, select *Debugger>Select Tool>MPLAB ICD 2*.

File Edit View Project	Debugger Programmer	Configure Windo	w Help
	Select Tool	•	None 🧉
	Clear All Memory		🗸 MPLAB ICD 2
🗖 C:\mcc18\example\gettir	Run	FQ	MPLAB ICE 4000
[□ [C:\mcc18\example\getting_star	i vun	5	MPLAB SIM
Source Files	Halt	F5	
example1.c	Sten Into	F7	IMIPLADICE 2000
Header Files	otop into		dsPIC SIM
Object Files	Step Over	F8 .	
Library Files 📃 🔍	Recet	•	
Linker Scripts			
18f452i.lkr	Proclansinto	50	
	Dreakpoints	ΓZ	
			verter

To connect the MPLAB ICD 2, choose <u>Debugger>Connect</u>. See the MPLAB ICD 2 documentation for information on how to configure the MPLAB ICD 2 connection settings.

File Edit View Project	Debugger Programmer Cor	figure Window Help
0 📽 🖬 🐰 🐂 🖷	Select Tool Clear All Memory	• • • • • •
C:\mcc18\example\getting_sta 	Run Hait Step Into Step Over Reset	F9 F5 F7 F8
Buil	Breakpoints	F2
MP: Coj Err	Connect Download ICD2 Operating S	verter ogy Inc. ystem
MP: Coj	Program	verter pgy Inc.
	Settings aded C:\mcc18\example\ge LLD_SUCCEEDED	etting_started\example

The output window should show that the MPLAB ICD 2 passed its self-test and is ready to be programmed. If any errors occur, refer to documentation for the MPLAB ICD 2.

Cutput	
Build Find in Files MPLAB ICD 2	
Connecting to MPLAB ICD 2	
Setting Vdd source to target Target Device PIC18F452 found, revision = 0x5 Reading ICD Product ID	
Running ICD Self Test	
Download Operating System Succeeded Running ICD Self Test Passed	
MPLAB ICD 2 Ready	-

File Edit View Proj	ject	Debugger	Programmer	Configure	Window	Help
🗅 📽 🖬 🐰 🐂 I		Select T Clear Al	[°] ool I Memory		• •	₩ 8 8 🗄 📗
C:\mcc18\example\gettin C:\mcc18\example\gettin C:\mcc18\example\gettin C:\mcc18\example\gettin C:\mcc18\example\gettin example1.c Header Files Object Files Dibrary Files 	g_star g_star Buik Cor Set Tar	Run Halt Step Int Step Ov Reset Breakpo Connect Downloa	o er vints t ad ICD2 Operat	ing System	F9 F5 F7 F8 F2	on = 0x5
	Rur Rur Rur MPT 2	Program Settings Passed AB TCD 2	Ready		 ec	1
Note: Programmin	a th	e device	roquiros roc	lucing the	nroara	m memory snav

To program the device, select <u>Debugger>Program</u>.

Note: Programming the device requires reducing the program memory space available to allow for MPLAB ICD 2 resources, disabling low voltage programming and disabling the Watchdog Timer. If you receive MPLAB ICD 2 Warning dialogs concerning any of these issues, simply click **OK** to proceed.

The output window should show that the programming operation succeeded.



MPLAB® C18 C Compiler Getting Started

A breakpoint may be set in the source file as demonstrated for the MPLAB SIM Simulator. When **Run** on the toolbar is pressed, the program halts immediately after the statement at the breakpoint has been executed.

Note: This is different than the MPLAB SIM Simulator, which halts before the statement at the breakpoint is executed. The green arrow points to the next statement to be executed.



The PORTB register has been assigned the value of 1. The LEDs on the PICDEM 2 Plus demo board, which are multiplexed with the PORTB pins, should display the binary representation of 1.

Note: The J6 connection on the demo board must be jumpered in order to connect the PORTB pins with the LEDs.

Each time **Run** on the toolbar is pressed, execution halts after the assignment to PORTB and the value on the LEDs should reflect the incriminated value of counter.

3.4 EXAMPLE 2

This example is designed for use with the MPLAB IDE v6.xx, the MPLAB ICD 2, the PICDEM 2 Plus demo board and the PIC18F452 device. It demonstrates the use of the MPLAB C18 peripheral libraries and the C standard library. It also demonstrates the allocation of variables into program memory. The program cycles through a list of strings, each representing a number from 0 to 15. Each string is converted into its integer representation for display on the LEDs. The program pauses after displaying each number to give the user an opportunity to observe the LEDs. For this program, the J6 connection on the PICDEM 2 Plus demo board must be jumpered.

- MPLAB C18 places string literals in program memory; therefore, the rom keyword is required in the declaration of the array string_table. The const keyword alone will not place the data in program memory; the rom keyword is required. Since program memory in general cannot be modified without additional specialized code, the const keyword is appropriate.
- The standard C library function atoi, which converts the string to an integer representation, expects a character pointer located in data memory. However, as the string literals are in program memory, they must be copied to data memory first. The function strcpypgm2ram, which is an MPLAB C18 variant of strcpy, does just that.
- The PORTB register, which is connected to the LEDs on the PICDEM 2 demo board, and the TRISB register, which configures the PORTB pins for input or output, are declared in the processor-specific header file p18f452.h.
- MPLAB C18 provides several functions which provide delays of various lengths, such as Delay10RTCYx used below. See the header file delays.h for more details.

This example can be built and linked in the MPLAB IDE v6.xx and used with the MPLAB ICD 2 by following the steps in Example 1.

Note: When compiling with the small code model, MPLAB C18 may emit a warning about a type qualifier mismatch in an assignment with respect to the call of strcpypgm2ram. This happens because the second argument passed to the function is a pointer to near program memory while the parameter's type in the function prototype is a far program memory pointer. Since the conversion from a near pointer to a far pointer is always safe, this warning can be ignored. Alternatively, the warning may be eliminated by compiling with the large code model (at the expense of possibly a larger code image). To do this, choose "Build Options" and then "Project" from the "Project" menu. Select "MPLAB C18" and choose "Memory Model" from the drop-down menu. Finally, select the large code model.

Build Options
General MPASM Assembler MPLINK Linker MPLAB C18
Categories: Memory Model Categories: Memory Model General Generate Command L General Code Model Code Model Code Model Code model (<= 64K bytes) Data Model Carge code model (> 64K bytes) Data Model Carge data model (all RAM banks) Small data model (access RAM only) Stack Model Stack Model Multi-bank model Multi-bank model
Inherit global settings Restore Defaults w2 -ms -0t - 0b-
-OW2-Oims-OlOa-
OK Cancel Apply

```
Build Options
                                                               ? ×
                  General MPASM Assembler MPLINK Linker MPLAB C18
                         Categories: Memory Model
                                                 -
                    - Generate Command Line -
                               Code Model
                                \bigcirc Small code model (<= 64K butes).

    Large code model (> 64K bytes)

                               Data Model
                               • Large data model (all RAM banks)
                                C Small data model (access RAM only)
                               Stack Model
                                Single-bank model
                                C Multi-bank model
                                                     Restore Defaults
                    🔲 Inherit global settings
                    -mL -Ot- -Ob-
                    🔲 Use Alternate Settings
                                           ΠK.
                                                   Cancel
                                                             Apply
#include <string.h> /* for 'strcpypgm2ram'
                                                           */
#include <stdlib.h> /* for 'atoi'
                                                           */
#include <delays.h> /* for 'Delay10KTCYx'
                                                           */
#include <p18f452.h> /* for 'PORTB' and 'TRISB' */
/* MPLAB C18 places string literals in program memory */
#define STRING TABLE SIZE 16
const rom char *string table[STRING TABLE SIZE] =
{ "0", "1", "2", "3",
  "4", "5", "6", "7",
  "8", "9", "10", "11",
  "12", "13", "14", "15"
};
void main (void)
{
   int index;
   int integer;
   char string[3];
   PORTB = 0;
   TRISB = 0;
                 /* configure all PORTB pins for output */
   for (index = 0; index < STRING_TABLE_SIZE; index++)</pre>
   {
       /* copy the string from program memory to data memory for 'atoi'
*/
       strcpypgm2ram (string, string_table[index]);
       /\star get the number's integer representation from its
          string representation */
       integer = atoi (string);
                               /* output the value to the LEDs */
       PORTB = integer;
       Delay10KTCYx (255); /* pause for a moment (255 * 10,000
cycles) */
   }
}
```

3.5 EXAMPLE 3

This example is designed for use with the MPLAB IDE v6.xx, the MPLAB SIM simulator and the PIC18F452 device. It demonstrates the allocation of variables in access RAM. For each value from 0 to 99, the program finds the square root of the value with the fractional part truncated. It then squares this root to obtain the greatest perfect square less than or equal to the original value.

- The square root function is implemented as a table in program memory. This has several advantages. If the table were in data memory, it would need to be copied from program memory to data memory at program initialization. Locating the table in program memory also saves data memory space. Finally, the code associated with calculating the square root at runtime may occupy more program memory than a table when the domain of the function is small.
- Data located in access RAM does not require the BSR register to be loaded, thus resulting in fewer instructions. The variables root and square are located in an access RAM section named MY_ACS_DATA. The type qualifier near must be used to ensure that MPLAB C18 knows bank selection is not required for these objects.

This example can be built and linked in the MPLAB IDE v6.xx and used with the MPLAB SIM simulator by following the steps in Example 1.

MPLAB C18, by default, assumes all statically allocated data objects, unless explicitly specified with the near type qualifier, reside in banked (non-access) RAM. This default behavior can be changed with the command-line option



-Oa+. To make this change, choose *Project>Build Options>Project*.

vel AB IDE Build Options	<u>? ×</u>	Help	
General MPASM Assembler MPLINK Lin General General General Command L Manage Model Optimization Treat 'char' as unsigned Diagnostics levet Errors and warnings	Ver MPLAB C18	¶ िंग िंग् ि∰	
□ Inherit global settings □ Ot-Ob-	Remove All Restore Defaults		
Use Alternate Settings	IK Cancel Appli		

Select the tab labeled "MPLAB C18" and choose "Memory Model" from the drop-down menu.

Finally, select the small data model to tell MPLAB C18 that statically allocated data objects without an explicit near or far qualifier are located in access RAM. See the *MPLAB C18 C Compiler User's Guide* (DS51288) for details on access and banked (non-access) RAM. Press **OK**.

Build Options
General MPASM Assembler MPLINK Linker MPLAB C18
Memory Model
Generate Command Line
Code Model Small code model (<= 64K bytes) Large code model (> 64K bytes) Data Model Large data model (all RAM banks) Small data model (access RAM only) Stack Model Stack Model Multi-bank model Multi-bank model
Inherit global settings Restore Defaults
-Oa -OtOb-
Use Alternate Settings
OK Cancel Apply

MPLAB® C18 C Compiler Getting Started

```
#include <p18f452.h> /* for 'PRODL' declaration and 'ACCESS' macro */
/*
   Locate the read-only table in program memory at address 0x1000.
 *
 *
   'romdata' is used for data, and 'code' is used for instructions.
 */
#pragma romdata ROOT_TABLE = 0x1000
#define TABLE_SIZE 100
const rom unsigned char roots[TABLE_SIZE] =
\{0, 1, 1, 1, 2, 2, 2, 2, 2, 3,
  3, 3, 3, 3, 3, 3, 4, 4, 4, 4,
  4, 4, 4, 4, 4, 5, 5, 5, 5, 5,
  5, 5, 5, 5, 5, 5, 6, 6, 6, 6,
  6,6,6,6,6,6,6,6,7,
  7, 7, 7, 7, 7, 7, 7, 7, 7, 7,
  7, 7, 7, 7, 8, 8, 8, 8, 8, 8,
  8, 8, 8, 8, 8, 8, 8, 8, 8, 8, 8,
  8, 9, 9, 9, 9, 9, 9, 9, 9, 9, 9,
  9, 9, 9, 9, 9, 9, 9, 9, 9, 9 };
/*
 * Data in access ram does not require banking.
 * When compiled with '-Oa', these pragmas and the 'near' qualifier
 *
   may be removed.
 */
#pragma udata access MY_ACS_DATA
near unsigned char root, square;
#pragma udata /* continue allocating static data in non-access ram */
/*
  Returns the truncated root of the value.
 */
unsigned char get_root (int val)
{
   return roots[val];
}
void main (void)
{
    static int val;
    for (val = 0; val < TABLE_SIZE; val++)</pre>
    {
       /\star 'square' holds the greatest perfect square less than or
           equal to 'val' */
    square = get_root (val);
    }
}
  Note: When compiling this example with static data in access RAM by default.
```

the udata pragmas surrounding the declarations of root and square may be removed, as well as the near type qualifier.

3.6 EXAMPLE 4

This example is designed for use with the MPLAB ICD 2, the PICDEM 2 Plus demo board, the MPLAB IDE v6.xx and the PIC18F452 device. It demonstrates the use of interrupt service routines with MPLAB C18. It also provides an example of the use of the MPLAB C18 peripheral libraries. For this program, the J6 jumper on the demo board must be removed in order to disconnect the PORTB pins from the LEDs.

- This program generates the Piezo buzzer of the PICDEM 2 Plus demo board. The user may disable the buzzer by pressing the S3 button. The buzzer may be reactivated by pressing the button again.
- The S3 button is connected to the INT0 pin, which is associated with the INT0 external interrupt. This interrupt is a high priority interrupt, and so will always trigger a branch to program memory address 0x8. At this address is located the interrupt service routine (high_ISR) which branches to the procedure that turns the buzzer either off or on.
- toggle_buzzer is declared as a high priority interrupt routine. This means the WREG, BSR and STATUS registers will be saved and restored via their shadow registers without explicit instructions upon interrupt routine entry and exit. Additionally, upon return, the GIEH bit in the INTCON register will be set, which was cleared when the interrupt was triggered. Refer to the *PIC18FXX2 Data Sheet* (DS39564) for details on interrupt logic.

This example can be built and linked in the MPLAB IDE v6.xx and used with the MPLAB ICD 2 by following the steps in Example 1.

```
#include <p18f452.h> /* for the special function register declarations */
#include <portb.h> /* for the RB0/INT0 interrupt */
/*
 * For high interrupts, control is transferred to address 0x8.
 */
void togqle buzzer (void); /* prototype needed for 'goto' below */
#pragma code HIGH INTERRUPT VECTOR = 0x8
void high ISR (void)
{
   _asm
   goto toggle buzzer
   _endasm
}
#pragma code /* allow the linker to locate the remaining code */
/*
 * If the buzzer is on, turn it off. If it is off, turn it on.
 */
#pragma interrupt toggle_buzzer
void toggle buzzer (void)
{
   CCP1CON = \sim CCP1CON \& 0x0F;
                                 /* turn the buzzer off or on */
   INTCONbits.INTOIF = 0;
                                  /* clear flag to avoid another interrupt */
}
void EnableHighInterrupts (void)
{
   RCONbits.IPEN = 1;  /* enable interrupt priority levels */
   INTCONbits.GIEH = 1; /* enable all high priority interrupts */
}
```

MPLAB® C18 C Compiler Getting Started

```
void InitializeBuzzer (void)
{
                   /* postscale 1:1, Timer2 ON, prescaler 4 */
   T2CON = 0x05;
   TRISCbits.TRISC2 = 0; /* configure the CCP1 module for the buzzer */
   PR2 = 0x80; /* initialize the PWM period */
                        /* initialize the PWM duty cycle */
   CCPR1L = 0x80;
}
void SoundBuzzer (void)
{
   CCP1CON = 0x0F; /* turn the buzzer on */
   while (1); /* wait for the S3 button to be pressed */
}
void main (void)
{
   EnableHighInterrupts ( );
   InitializeBuzzer ( );
   OpenRB0INT (PORTB_CHANGE_INT_ON & /* enable the RB0/INT0 interrupt */
               <code>PORTB_PULLUPS_ON & /* configure the RBO pin for input */</code>
               FALLING_EDGE_INT);
                                  /* trigger interrupt upon S3 button
                                       depression */
   SoundBuzzer ( );
}
```



MPLAB[®] C18 C COMPILER GETTING STARTED

Glossary

Α

absolute section

A section with a fixed address that cannot be changed by the linker.

access memory

Special general purpose registers on the PIC18 PICmicro microcontrollers that allow access regardless of the setting of the bank select register (BSR).

address

The code that identifies where a piece of information is stored in memory.

anonymous structure

An unnamed object.

ANSI

American National Standards Institute

assembler

A language tool that translates assembly source code into machine code.

assembly

A symbolic language that describes the binary machine code in a readable form.

assigned section

A section that has been assigned to a target memory block in the linker command file.

asynchronously

Multiple events that do not occur at the same time. This is generally used to refer to interrupts that may occur at any time during processor execution.

В

binary

The base two numbering system that uses the digits 0-1. The right-most digit counts ones, the next counts multiples of 2, then $2^2 = 4$, etc.

С

central processing unit

The part of a device that is responsible for fetching the correct instruction for execution, decoding that instruction and then executing that instruction. When necessary, it works in conjunction with the arithmetic logic unit (ALU) to complete the execution of the instruction. It controls the program memory address bus, the data memory address bus and accesses to the stack.

compiler

A program that translates a source file written in a high-level language into machine code.

conditional compilation

The act of compiling a program fragment only if a certain constant expression, specified by a preprocessor directive, is true.

CPU

Central Processing Unit

Ε

endianness

The ordering of bytes in a multi-byte object.

error file

A file containing the diagnostics generated by the MPLAB C18

F

fatal error

An error that will halt compilation immediately. No further messages will be produced.

frame pointer

A pointer that references the location on the stack that separates the stack-based arguments from the stack-based local variables.

free-standing

An implementation that accepts any strictly conforming program that does not use complex types and in which the use of the features specified in the library clause (ANSI '89 standard clause 7) is confined to the contents of the standard headers <float.h>, <iso646.h>, <limits.h>, <stdarg.h>, <stdbool.h>, <stddef.h>, <stddef.h>, <stddool.h>, <

Η

hexadecimal

The base 16 numbering system that uses the digits 0-9 plus the letters A-F (or a-f). The digits A-F represent decimal values of 10 to 15. The right-most digit counts ones, the next counts multiples of 16, then $16^2 = 256$, etc.

high-level language

A language for writing programs that is further removed from the processor than assembly.

ICD

In-Circuit Debugger

ICE

In-Circuit Emulator

IDE

Integrated Development Environment

IEEE

Institute of Electrical and Electronics Engineers

interrupt

A signal to the CPU that suspends the execution of a running application and transfers control to an ISR so that the event may be processed. Upon completion of the ISR, normal execution of the application resumes.

interrupt service routine

A function that handles an interrupt.

ISO

International Organization for Standardization

ISR

Interrupt Service Routine

L

latency

The time between when an event occurs and the response to it.

librarian

A program that creates and manipulates libraries.

library

A collection of relocatable object modules.

linker

A program that combines object files and libraries to create executable code.

little endian

Within a given object, the least significant byte is stored at lower addresses.

Μ

memory model

A description that specifies the size of pointers that point to program memory.

microcontroller

A highly integrated chip that contains a CPU, RAM, some form of ROM, I/O ports and timers.

MPASM assembler

Microchip Technology's relocatable macro assembler for PICmicro microcontroller families.

MPLIB object librarian

Microchip Technology's librarian for PICmicro microcontroller families.

MPLINK object linker

Microchip Technology's linker for PICmicro microcontroller families.

0

object file

A file containing object code. It may be immediately executable or it may require linking with other object code files, e.g. libraries, to produce a complete executable program.

object code

The machine code generated by an assembler or compiler.

octal

The base 8 number system that only uses the digits 0-7. The right-most digit counts ones, the next digit counts multiples of 8, then $8^2 = 64$, etc.

Ρ

pragma

A directive that has meaning to a specific compiler.

R

RAM

Random Access Memory

random access memory

A memory device in which information can be accessed in any order.

read only memory

Memory hardware that allows fast access to permanently stored data but prevents addition to or modification of the data.

ROM

Read Only Memory

recursive

Self-referential (e.g., a function that calls itself). See recursive.

reentrant

A function that may have multiple, simultaneously active instances. This may happen due to either direct or indirect recursion or through execution during interrupt processing.

relocatable

An object whose address has not been assigned to a fixed memory location.

runtime model

Set of assumptions under which the compiler operates.

S

section

A portion of an application located at a specific address of memory.

section attribute

A characteristic ascribed to a section (e.g., an access section).

special function register

Registers that control I/O processor functions, I/O status, timers, or other modes or peripherals.

storage class

Determines the lifetime of the memory associated with the identified object.

storage qualifier

Indicates special properties of the objects being declared (e.g., const).

V

vector

The memory locations that an application will jump to when either a reset or interrupt occurs.

NOTES:



MPLAB[®] C18 C COMPILER GETTING STARTED

Index

Α

A
Add Files to Project
В
Breakpoint
С
COD
D
Directory13Directory Contents8Documentation14Conventions2Layout1Numbering Conventions2Updates2
E
Examples
н
HEX
1
Installing MPLAB C18 11 interrupt service routine 1, 19, 43, 47
L
Language Tools 9, 22 Libraries 3, 8, 14 Linker Scripts 8, 14, 27, 33 Listing Files 32 little endian 47
Μ
Map Files32MCC_INCLUDE15Memory Model41MPLAB C18 C Compiler Libraries3MPLAB C18 C Compiler User's Guide3MPLAB ICD 232MPLAB SIM Simulator29

N
New Project20
Ρ
Paths24Product Support5Project Paths24Project Settings22Project Tree21
R
README File
S
Select Device
Product 5
System Requirements7
т
Troubleshooting3
U
Uninstalling MPLAB C1817 User's Guide
W
Watch Window 30, 31



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: 480-792-7627 Web Address: http://www.microchip.com

Rocky Mountain

2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7966 Fax: 480-792-4338

Atlanta

500 Sugar Mill Road, Suite 200B Atlanta, GA 30350 Tel: 770-640-0034 Fax: 770-640-0307

Boston

2 Lan Drive, Suite 120 Westford, MA 01886 Tel: 978-692-3848 Fax: 978-692-3821

Chicago

333 Pierce Road, Suite 180 Itasca, IL 60143 Tel: 630-285-0071 Fax: 630-285-0075

Dallas

4570 Westgrove Drive, Suite 160 Addison, TX 75001 Tel: 972-818-7423 Fax: 972-818-2924

Detroit

Tri-Atria Office Building 32255 Northwestern Highway, Suite 190 Farmington Hills, MI 48334 Tel: 248-538-2250 Fax: 248-538-2260

Kokomo

2767 S. Albright Road Kokomo, Indiana 46902 Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles

18201 Von Karman, Suite 1090 Irvine, CA 92612 Tel: 949-263-1888 Fax: 949-263-1338

San Jose

Microchip Technology Inc. 2107 North First Street, Suite 590 San Jose, CA 95131 Tel: 408-436-7950 Fax: 408-436-7955

Toronto

6285 Northam Drive, Suite 108 Mississauga, Ontario L4V 1X5, Canada Tel: 905-673-0699 Fax: 905-673-6509

ASIA/PACIFIC

Australia

Microchip Technology Australia Pty Ltd Suite 22, 41 Rawson Street Epping 2121, NSW Australia

Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

China - Beijing Microchip Technology Consulting (Shanghai) Co., Ltd., Beijing Liaison Office Unit 915 Bei Hai Wan Tai Bldg. No. 6 Chaoyangmen Beidajie Beijing, 100027, No. China Tel: 86-10-85282100 Fax: 86-10-85282104

China - Chengdu

Microchip Technology Consulting (Shanghai) Co., Ltd., Chengdu Liaison Office Rm. 2401, 24th Floor, Ming Xing Financial Tower No. 88 TIDU Street Chengdu 610016, China Tel: 86-28-86766200 Fax: 86-28-86766599

China - Fuzhou

Microchip Technology Consulting (Shanghai) Co., Ltd., Fuzhou Liaison Office Unit 28F, World Trade Plaza No. 71 Wusi Road Fuzhou 350001, China Tel: 86-591-7503506 Fax: 86-591-7503521

China - Shanghai

Microchip Technology Consulting (Shanghai) Co., Ltd. Room 701, Bldg. B Far East International Plaza No. 317 Xian Xia Road Shanghai, 200051 Tel: 86-21-6275-5700 Fax: 86-21-6275-5060

China - Shenzhen

Microchip Technology Consulting (Shanghai) Co., Ltd., Shenzhen Liaison Office Rm. 1315, 13/F, Shenzhen Kerry Centre, Renminnan Lu Shenzhen 518001, China Tel: 86-755-82350361 Fax: 86-755-82366086

China - Hong Kong SAR

Microchip Technology Hongkong Ltd. Unit 901-6, Tower 2, Metroplaza 223 Hing Fong Road Kwai Fong, N.T., Hong Kong Tel: 852-2401-1200 Fax: 852-2401-3431 India

Microchip Technology Inc. India Liaison Office **Divvasree Chambers** 1 Floor, Wing A (A3/A4) No. 11, O'Shaugnessey Road Bangalore, 560 025, India Tel: 91-80-2290061 Fax: 91-80-2290062

Japan

Microchip Technology Japan K.K. Benex S-1 6F 3-18-20, Shinyokohama Kohoku-Ku, Yokohama-shi Kanagawa, 222-0033, Japan Tel: 81-45-471- 6166 Fax: 81-45-471-6122 Korea Microchip Technology Korea 168-1, Youngbo Bldg. 3 Floor Samsung-Dong, Kangnam-Ku Seoul, Korea 135-882 Tel: 82-2-554-7200 Fax: 82-2-558-5934 Singapore Microchip Technology Singapore Pte Ltd. 200 Middle Road #07-02 Prime Centre Singapore, 188980 Tel: 65-6334-8870 Fax: 65-6334-8850 Taiwan Microchip Technology (Barbados) Inc., Taiwan Branch 11F-3, No. 207 Tung Hua North Road Taipei, 105, Taiwan Tel: 886-2-2717-7175 Fax: 886-2-2545-0139

EUROPE Austria

Wokingham

Microchip Technology Austria GmbH Durisolstrasse 2 A-4600 Wels Austria Tel: 43-7242-2244-399 Fax: 43-7242-2244-393 Denmark Microchip Technology Nordic ApS Regus Business Centre Lautrup hoj 1-3 Ballerup DK-2750 Denmark Tel: 45 4420 9895 Fax: 45 4420 9910 France Microchip Technology SARL Parc d'Activite du Moulin de Massy 43 Rue du Saule Trapu Batiment A - ler Etage 91300 Massy, France Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79 Germany

Microchip Technology GmbH Steinheilstrasse 10 D-85737 Ismaning, Germany Tel: 49-89-627-144 0 Fax: 49-89-627-144-44 Italy Microchip Technology SRL Centro Direzionale Colleoni Palazzo Taurus 1 V. Le Colleoni 1 20041 Agrate Brianza Milan, Italy Tel: 39-039-65791-1 Fax: 39-039-6899883 United Kingdom Microchip Ltd. 505 Eskdale Road Winnersh Triangle

Berkshire, England RG41 5TU Tel: 44 118 921 5869 Fax: 44-118 921-5820

10/18/02