

■BlueChip PLC Evaluation board Manual

Dolphin BCP-STD for PLC

BCP-CP-E01 : Evaluation board (Dolphin STD)

2016/03/29

Proprietary MegaChips Corporation

■Table of contents

- EVALUATION KIT IMPORTANT NOTICE
- BlueChip PLC Evaluation board contents
- OutlineView
- Detail
- Jumper-pin Setting
- Tx Power Setting
- AC/DC adapter
- BCP-COAX_CONV Board (Coupler)
- Connection Diagram (Ether Bridge Test with DC power line)
- Connection Diagram (Ether Bridge Test with Coax.)
- Connection Diagram (Ether Bridge Test with AC power line)
- Connection Diagram (RS485 Bridge Test)
- Connection Diagram (Multi-hop Test)

■EVALUATION KIT IMPORTANT NOTICE

MegaChips Corporation (MCC) provides these evaluation kits (EVKs) under the following AS IS conditions:

The EVKs are intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and are not for commercial use. Therefore, the EVKs are not fault-tolerant and are not designed or manufactured with protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, the EVKs do not fall within the scope of the European Union Directive on electromagnetic compatibility. Also be aware that the EVKs may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

The EVKs have 110/220VAC POWER DIRECTLY CONNECTED TO THEIR CIRCUITS, which can cause PERSONAL INJURY, DEATH OR PHYSICAL DAMAGE. Therefore, caution should be exercised when testing these devices. The user must be a skilled person in the practice and art of high voltage circuitry in order to utilize the circuits in the EVKs. It is highly recommended that the user should have qualifications or any certificate for handling 110/220VAC Power, COMMON SENSE IS ENCOURAGED. The user agree not to use the EVKs in any situation where damage or injury to persons, property or business could occur. Furthermore, the EVKs are NOT FOR RESALE/COMMERCIAL USE AND MUST BE STRICTLY OPERATED IN A WELL-CONTROLLED LABORATORY ENVIRONMENTS.

THE USER ASSUMES ALL RESPONSIBILITY AND LIABILITY FOR PROPER AND SAFE HANDLING OF THE EVKS. FURTHER, THE USER RELEASES MCC FROM ALL CLAIMS ARISING FROM THE HANDING OR USE OF THE EVKS.

This notice contains important safety information as to handling EVKs. For further safety concerns, please contact a MCC application engineer.

■BlueChip PLC Evaluation board contents(1/2)

1.Dolphin BCP-STD Master/Terminal set



① Packaging box

:1pcs



② EVALUATION KIT IMPORTANT NOTICE	:1pcs
3 Multi-hop Master unit	:1pcs
Multi-hop Terminal unit	:1pcs
⑤ AC adapter(DC12V)	:2pcs
6 Connector Plug for RS485 Port Connector	:2pcs
MC 1,5/ 3-ST-3,5(PhoenixContact)	
⑦ Connector Plug for PLC Interface Connector	:4pcs

MSTB 2,5/ 2-ST(PhoenixContact)

8 BCP-COAX_CONV Board :2pcs

■BlueChip PLC Evaluation board contents(2/2)

2.Dolphin BCP-STD Terminal/Terminal set



1 Packaging box

:1pcs




② EVALUATION KIT IMPORTANT NOTICE	:1pcs
3 Multi-hop Master unit	:0pcs
Multi-hop Terminal unit	:2pcs
⑤ AC adapter(DC12V)	:2pcs
6 Connector Plug for RS485 Port Connector	:2pcs
MC 1,5/3-ST-3,5(PhoenixContact)	
⑦ Connector Plug for PLC Interface Connector	:4pcs

MSTB 2,5/ 2-ST(PhoenixContact)

8 BCP-COAX CONV Board :2pcs

Confidential, Preliminary MegaChips Corporation 2016/03/29

■OutlineView

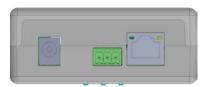




Label: BCP-STD(Master)

MAC ADDRESS

M/T LED: Green ON

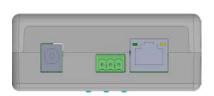



Label: BCP-STD(Terminal)

MAC ADDRESS


M/T LED: Green OFF



Terminal unit

Master unit

Detail

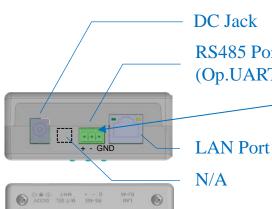

RS485 Port

(Op.UART Port)

MC 1,5/3-ST-3,5(PhoenixContact) $0.14 \text{mm}^2 \sim 1.5 \text{mm}^2 / \text{AWG} 28 \sim 16$

PLC LED : PLC Link status

LAN LED : LAN status

M/T LED : Master mode :Green ON


Terminal mode :Green OFF

SETUP button: Power-up with holding SETUP pressed will change the Master/Terminal


mode.

INIT button: Reset to factory default (push at least 1second)

PLC Interface Connector (Op. AC Input Connector)

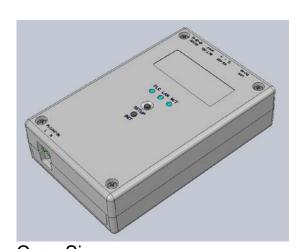

Case Size $32mm(H) \times 80mm(W) \times 125mm(D)$

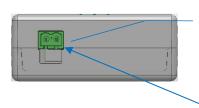

Dolphin


MSTB 2,5/ 2-ST(PhoenixContact) $0.2 \text{mm}^2 \sim 2.5 \text{mm}^2 / \text{AWG} 24 \sim 12$


■Jumper-pin Setting(1/2)

(1)Power Input Source Setting

No.	Power Input Source	JP100/JP101
1*	DC12V from CN200(DC-JACK)	OPEN
2	AC100~AC240V from CN100	SHORT

*Default Setting

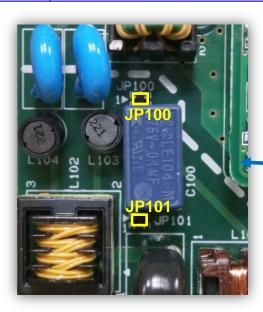

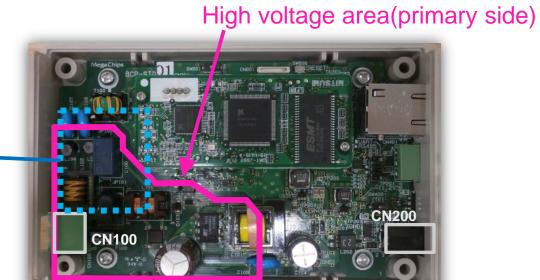

Warning!!

When JP100/101 is short, this area is directly connected to the input power (high voltage : AC100V-AC240V). Therefore, please do NOT touch this area while connected to the AC power line.

MegaChips

■Jumper-pin Setting(2/2)

(2)CN401 Interface Setting


No.	CN401 Interface	JP400 JP401	JP402 JP403	R410
1*	RS485	OPEN	SHORT	22Ω
2	UART	SHORT	OPEN	Non- mounted



*Default Setting



8

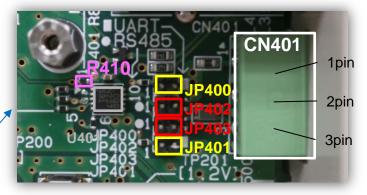



CN401 Pin assignment

Pin	Case Silk	RS485 mode	UART Mode
1	G	GND	GND
2	-	TxD-/RxD-	RXD (input)
3	+	TxD+/RxD+	TXD (output)

■Tx Power Setting(1/2)

This unit has two power control tables as below. Refer to next page about how to change the tables.

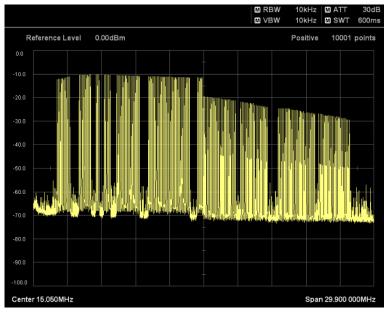

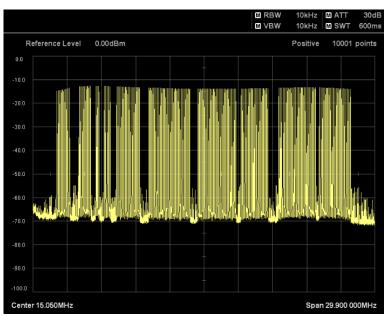

[Table index 0](Default)

[Table index 1]

■Tx Power Setting(2/2)

How to change the table index by "HD-PLC ToolManager"

(1)Start the "HD-PLC Tool Manager"

*Refer to "PTT-D0013E_ToolManager [Power Control] Manual (NDA Required).pdf" for the detailed usage.

(2)Click "Option" button.

(3) Select the table index, and Click "OK" button.

index 0* : for Japan (*:Default Setting)

index 1 : Full power setting

•index 2-7: N/A

•index 8,9: Reserved


(4)Input password "1234567890", and click "OK" button.

>The following message is displayed.



- (5)If you want to restart, click "OK" button.
 - >Then restart will be started.



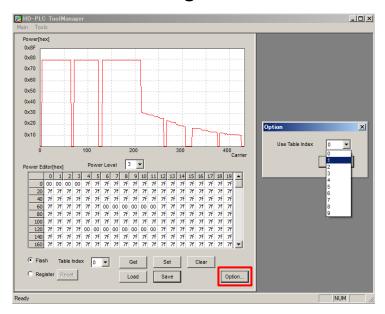

MegaChips 11

■AC/DC adapter

Maker : CUI


ModelNo: SMI6-12-V-P5


INPUT: 100-240V(47Hz-63Hz)


OUTPUT: DC12V/0.5A


units: mm


tolerance: ±1 mm

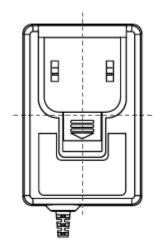

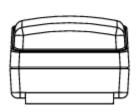

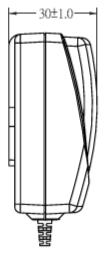

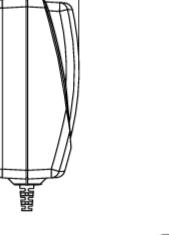

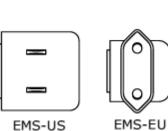





40.5±1




EMS-EU EMS-AU EMS-CC

64±1.0-

Confidential, Preliminary MegaChips Corporation 2016/03/29

■BCP-COAX_CONV Board (Coupler)




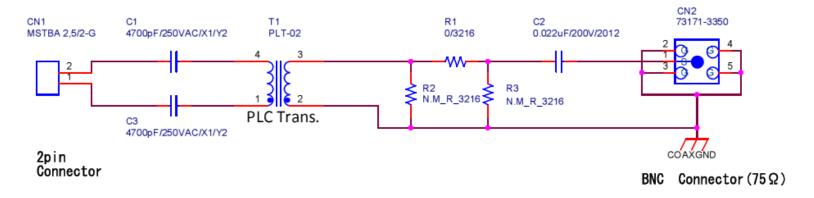

■Connection Diagram (Ether Bridge Test with DC power line)

- (1)Connect Ethernet Devices
- (2)Start Test


IP Camera

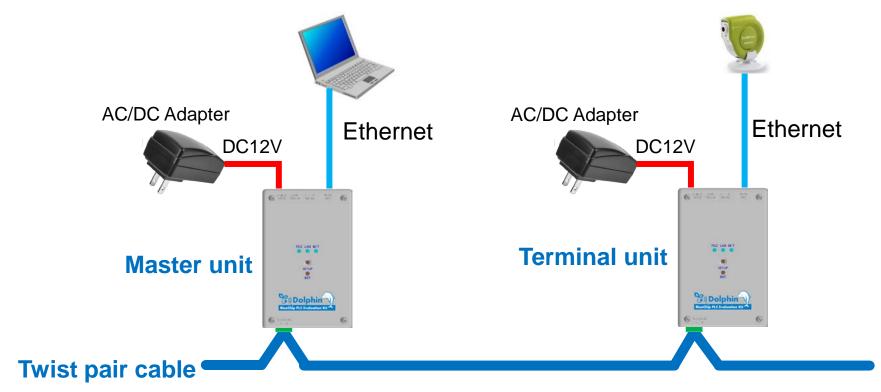

Communication & DC power line

■Connection Diagram (Ether Bridge Test with Coax.)

(1)Connect Ethernet Devices

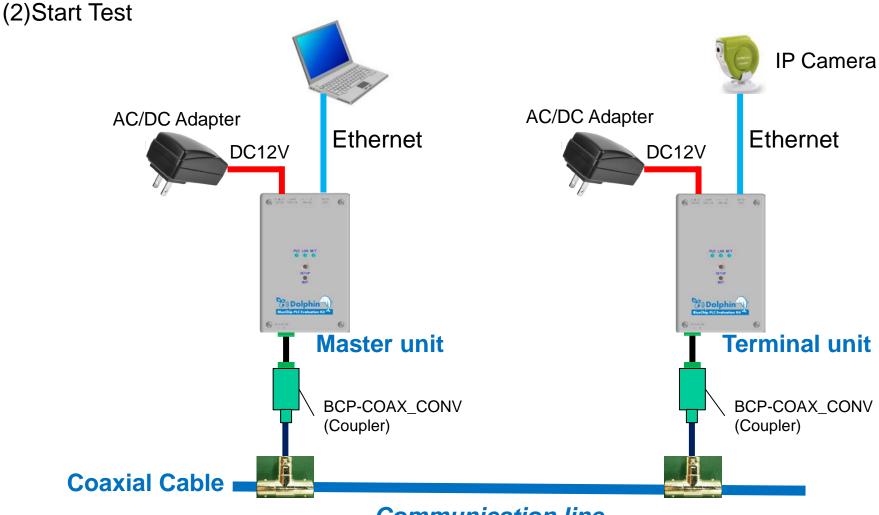


Communication line (including DC power line)

MegaChips

15

■Connection Diagram (Ether Bridge Test with AC power line)


- (1)Connect Ethernet Devices
- (2)Start Test

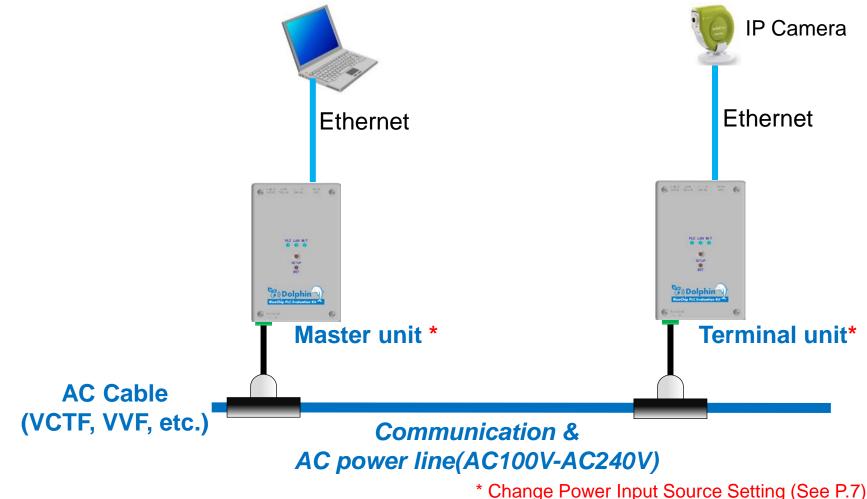

Change Power input Source Setting (See P.7)


■Connection Diagram (RS485 Bridge Test)

- (1)Connect RS485 Devices
- (2)Set RS485 parameters(Baud Rate, Address, etc.) by BCPNM (Default : Baud rate:115200bps, Data:8bit, Parity:None, Stop:1bit)
- (3)Start Test

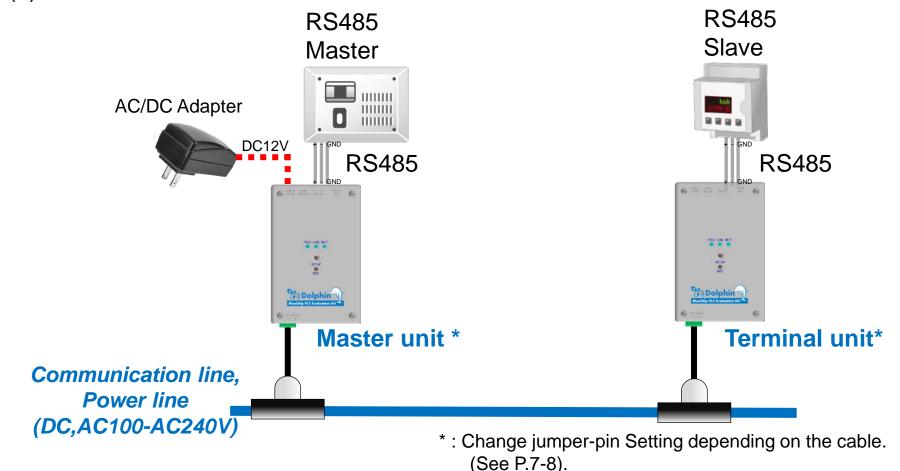

■Connection Diagram (Multi-hop Test)

- (1)Connect devices such as below
- (2)Start Test

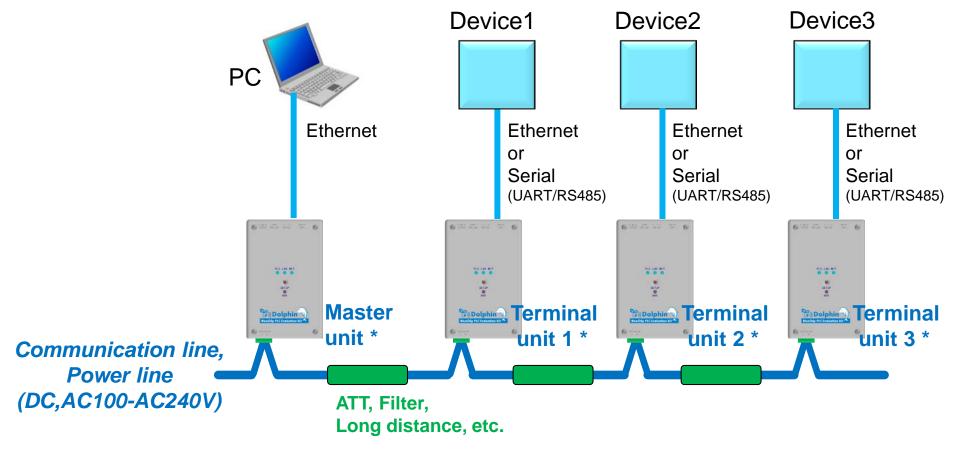

* : Change jumper-pin Setting depending on the cable and serial interface.(See P.7-8).